


KORG®

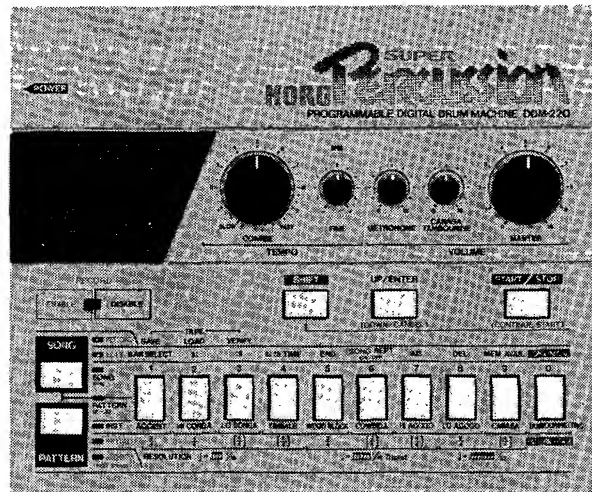

PROGRAMMABLE DIGITAL DRUM MACHINE

SERVICE MANUAL DDM-110/220

CONTENTS

| | |
|--------------------------|----|
| 1. SPECIFICATIONS | 2 |
| 2. STRUCTURAL DIAGRAM | 3 |
| 3. BLOCK DIAGRAM | 4 |
| 4. CIRCUIT DIAGRAM | 6 |
| 5. PC BOARD | 9 |
| 6. ADJUSTMENT PROCEDURE | 10 |
| 7. CIRCUIT DESCRIPTIONS | 11 |
| 8. TROUBLESHOOTING TABLE | 15 |
| 9. PARTS LIST | 16 |

KEIO ELECTRONIC LABORATORY CORPORATION
TOKYO/JAPAN

1. SPECIFICATIONS


DDM110

Tone Generators: Bass Drum, Snare Drum, Rimshot, High Tom, Low Tom, Closed High-Hat, Open High-Hat, Cymbal, Handclaps.
Accent: All instruments; ON/OFF; Step
Tempo Control: Coarse (SLOW ~ FAST); FINE (+ ~ -); Tempo indicator
Volume: Master; Metronome; HI HAT, SYMBAL
Pattern Keys: Pattern Mode, Instrument Mode, Initial Mode, Record Mode
Song Keys: Song Mode, Pattern Mode, Edit Mode, Record Mode
Number Keys (Sound Source Keys): Pattern Number Select, Song Number Select, Instrument Select, Initial Select, Pattern Erase, Song Initial Bar Select, Repeat, Repeat Time Select Song Repeat (ON/OFF), Insert, Delete, End, Memory Avail, Tape Interface (Save, Load, Verify)
Record Switch: ENABLE/DISABLE
START/STOP Key: START/STOP
Enter Key: Enter, Step Up/Down, Cancel
Shift Key: Enter Key Function Select; Continue Start; Instrument Erase
Pattern Memory: 32 Patterns (Maximum number of steps: 32 for patterns numbers 1 ~ 16; 16 for pattern numbers 17 ~ 32)
Song Memory: 6 Songs; Maximum Memory Capacity: 385 ~ 390 bars
Display: Pattern Number, Song Number, Bar Number, Step Number, Beat Count, Key Number, Memory Avail, Tape Interface Modes, Battery Check
Sync: 5-Pin DIN Jack IN/OUT Switch
Tape Interface: Tape Switch (DISABLE/FROM/TO), FROM Jack, TO Jack
Inputs: DC 9V; Start/Stop ($\overline{1}$ GND)
Outputs: Stereo Out (R/MIX, L), Phones, Trigger Out ($\overline{1}$ GND)
Power Supply: Six 1.5V "Penlight" AA size (SUM-3) batteries or AC adaptor (DC 9V, 300mA); Power Switch
Dimensions: 226(W) x 196(D) x 49(H) mm
Weight: 880g (including batteries)
Supplied Accessories: Shielded Audio Cord (2.5m), Batteries (UM-3 x 6), AC Adaptor

DDM220

Tone Generators: Hi Conga, Lo Conga, Timbale, Wood Black, Cowbell, Hi Agogo, Lo Agogo, Cabasa, Tambourine
Accent: All instruments; ON/OFF; Step
Tempo Control: Coarse (SLOW ~ FAST); FINE (+ ~ -); Tempo indicator
Volume: Master; Metronome; HI HAT, SYMBAL
Pattern Keys: Pattern Mode, Instrument Mode, Initial Mode, Record Mode
Song Keys: Song Mode, Pattern Mode, Edit Mode, Record Mode
Number Keys (Sound Source Keys): Pattern Number Select, Song Number Select, Instrument Select, Initial Select, Pattern Erase, Song Initial Bar Select, Repeat, Repeat Time Select Song Repeat (ON/OFF), Insert, Delete, End, Memory Avail, Tape Interface (Save, Load, Verify)
Record Switch: ENABLE/DISABLE
START/STOP Key: START/STOP
Enter Key: Enter, Step Up/Down, Cancel
Shift Key: Enter Key Function Select; Continue Start; Instrument Erase
Pattern Memory: 32 Patterns (Maximum number of steps: 32 for patterns numbers 1 ~ 16; 16 for pattern numbers 17 ~ 32)
Song Memory: 6 Songs; Maximum Memory Capacity: 385 ~ 390 bars
Display: Pattern Number, Song Number, Bar Number, Step Number, Beat Count, Key Number, Memory Avail, Tape Interface Modes, Battery Check
Sync: 5-Pin DIN Jack IN/OUT Switch
Tape Interface: Tape Switch (DISABLE/FROM/TO), FROM Jack, TO Jack
Inputs: DC 9V; Start/Stop ($\overline{1}$ GND)
Outputs: Stereo Out (R/MIX, L), Phones, Trigger Out ($\overline{1}$ GND)
Power Supply: Six 1.5V "Penlight" AA size (SUM-3) batteries or AC adaptor (DC 9V, 300mA); Power Switch
Dimensions: 226(W) x 196(D) x 49(H) mm
Weight: 880g (including batteries)
Supplied Accessories: Shielded Audio Cord (2.5m), Batteries (UM-3 x 6), AC Adaptor

2. STRUCTURAL DIAGRAM

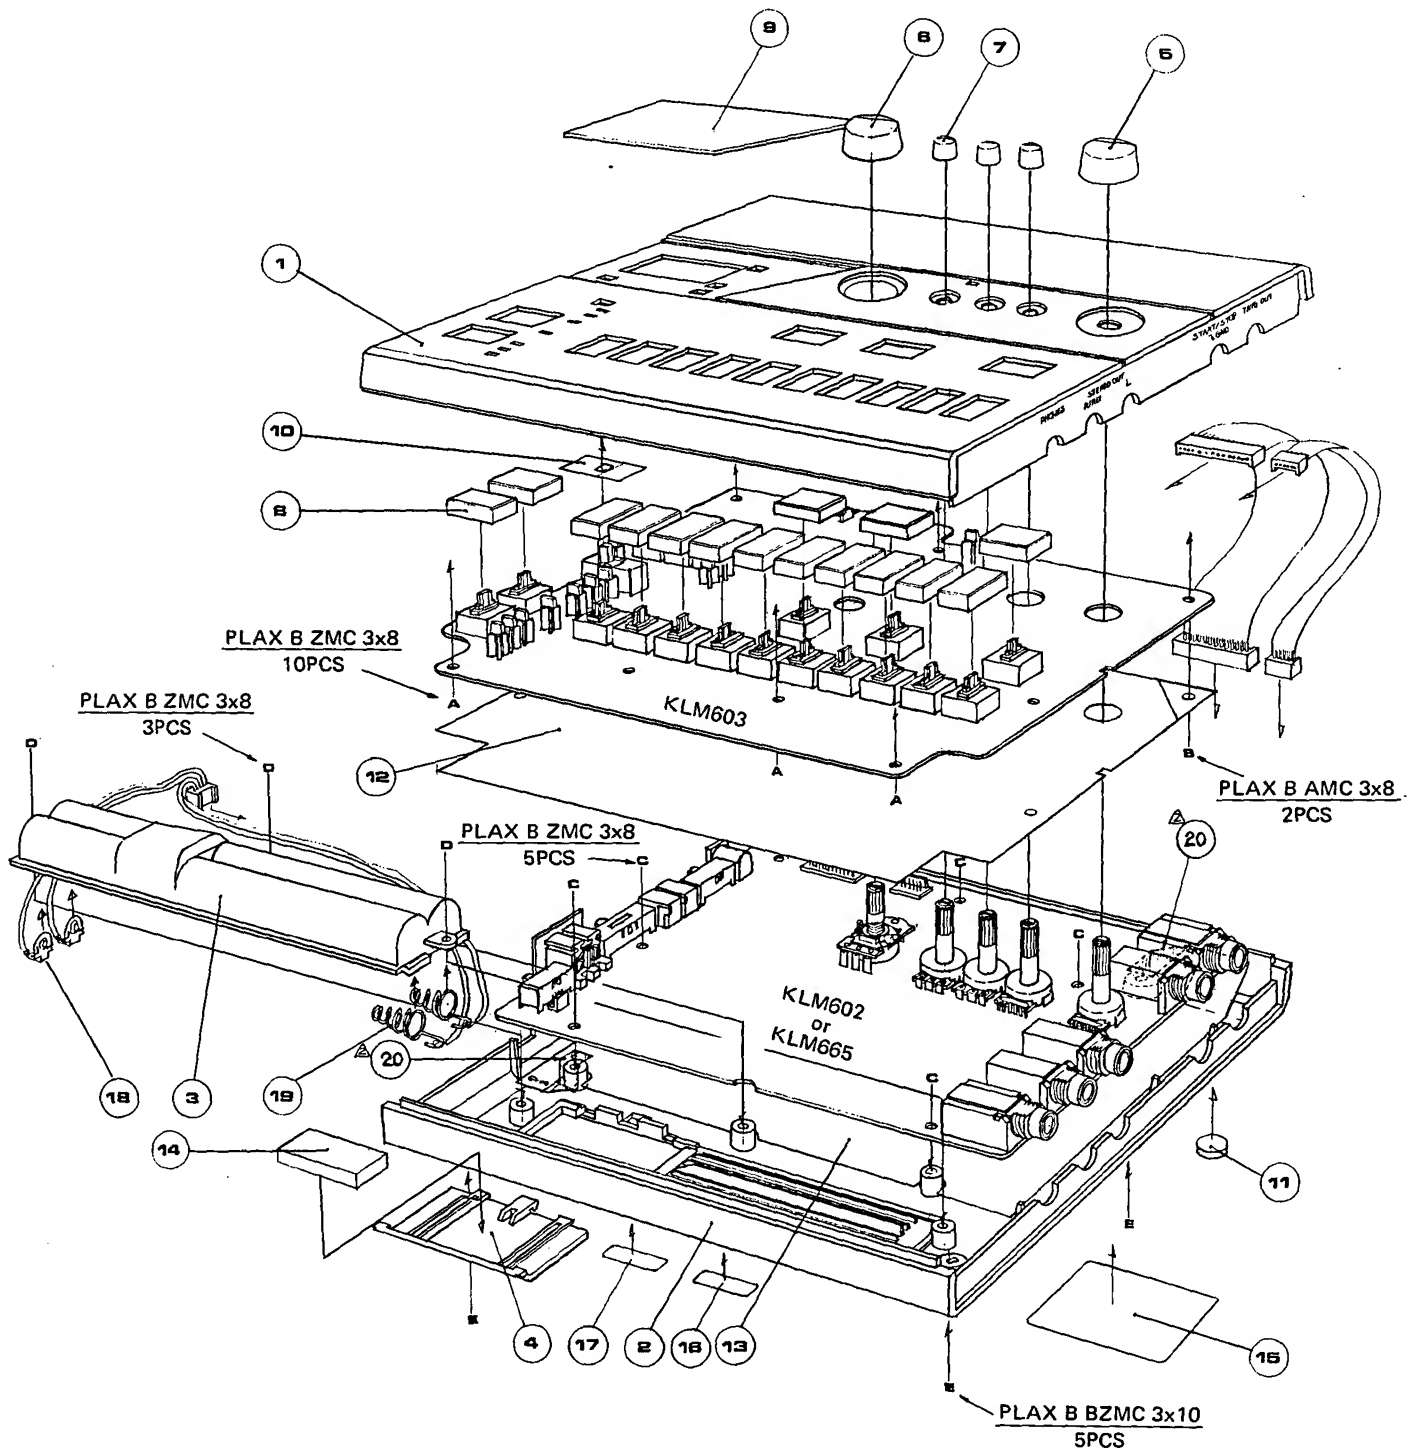



| PART No. | PART NAME | PART CODE | REMARK |
|----------|-----------------|-----------|----------------|
| 1. | UPPER CASE | 64618400 | DDM-110 BLACK |
| | UPPER CASE | 64618500 | DDM-220 SILVER |
| 2. | LOWER CASE | 64618600 | DDM-110/220 |
| 3. | BATTERY CASE | 64618700 | DDM-110/220 |
| 4. | BATTERY COVER | 64618800 | DDM-110/220 |
| 5. | VR KNOB (A) | 62013300 | DDM-110 BLACK |
| | VR KNOB (A) | 62013600 | DDM-220 GRAY |
| 6. | VR KNOB (B) | 62013301 | DDM-110 BLACK |
| | VR KNOB (B) | 62013601 | DDM-220 GRAY |
| 7. | VR KNOB (SMALL) | 62013400 | DDM-110 BLACK |
| | VR KNOB (SMALL) | 62013401 | DDM-220 GRAY |
| 8. | PUSH SW KNOB | 62013500 | DDM-110 BLACK |
| | PUSH SW KNOB | 62013501 | DDM-220 IVORY |

| PART No. | PART NAME | PART CODE | REMARK |
|----------|----------------------|-----------|-------------|
| 9. | DISPLAY COVER | 63000400 | DDM-110/220 |
| 10. | RECORD SW MASK | 55006500 | DDM-110/220 |
| 11. | RUBBER FEET | 50009100 | DDM-110/220 |
| 12. | SHIELDING SHEET A | 58020700 | DDM-110/220 |
| 13. | SHIELDING SHEET B | 58020701 | DDM-110/220 |
| 14. | BATTERY CUSHION | 50005300 | DDM-110/220 |
| 15. | CAUTION SEAL | 58020101 | DDM-110/220 |
| 16. | MODEL NUMBER SEAL | 58020300 | DDM-110 |
| | MODEL NUMBER SEAL | 58020400 | DDM-220 |
| 17. | SERIAL NUMBER SEAL | | DDM-110/220 |
| 18. | BATTERY TERMINAL (+) | 64905300 | DDM-110/220 |
| 19. | BATTERY TERMINAL (-) | 64905400 | DDM-110/220 |

3. BLOCK DIAGRAM


DDM-110

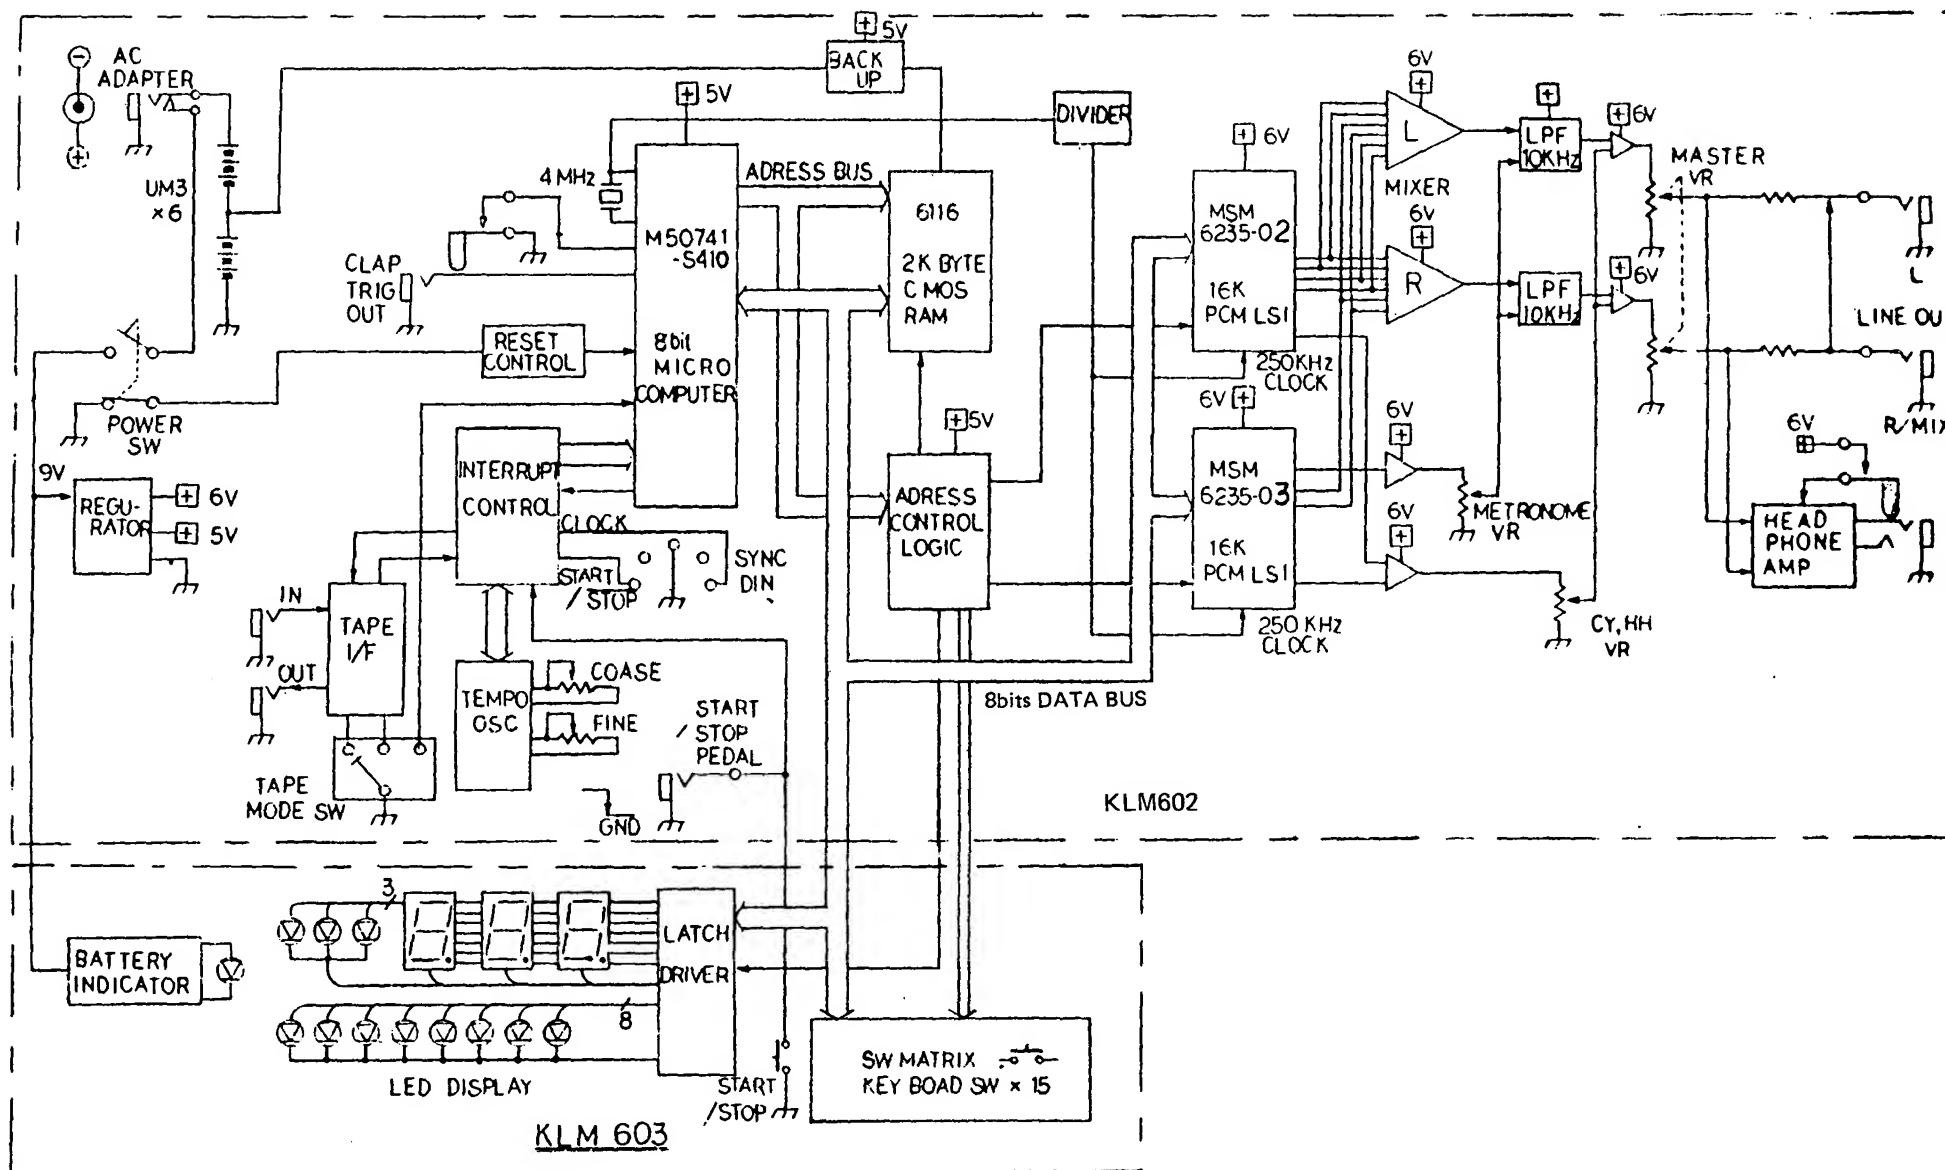


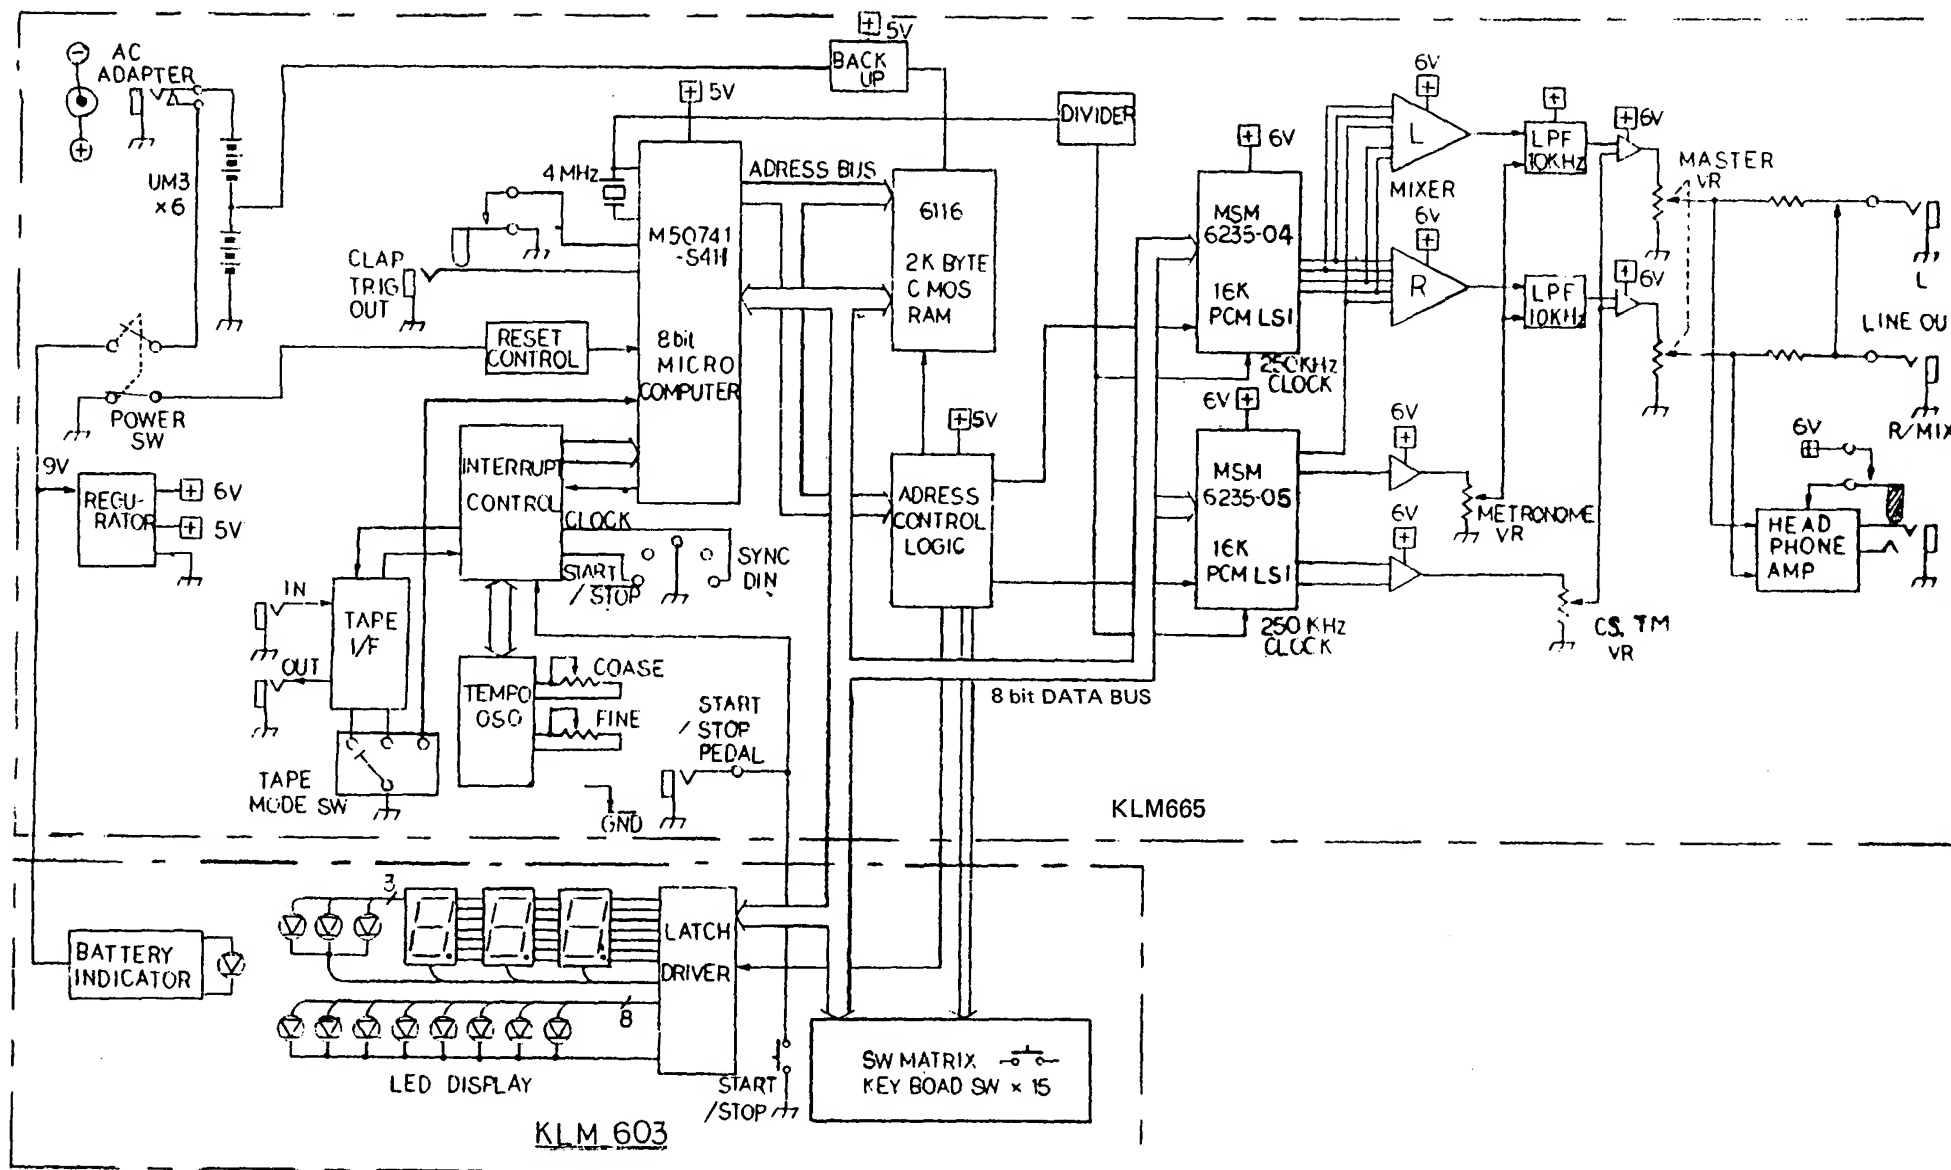


DDM-220

DDM-110, KLM-602

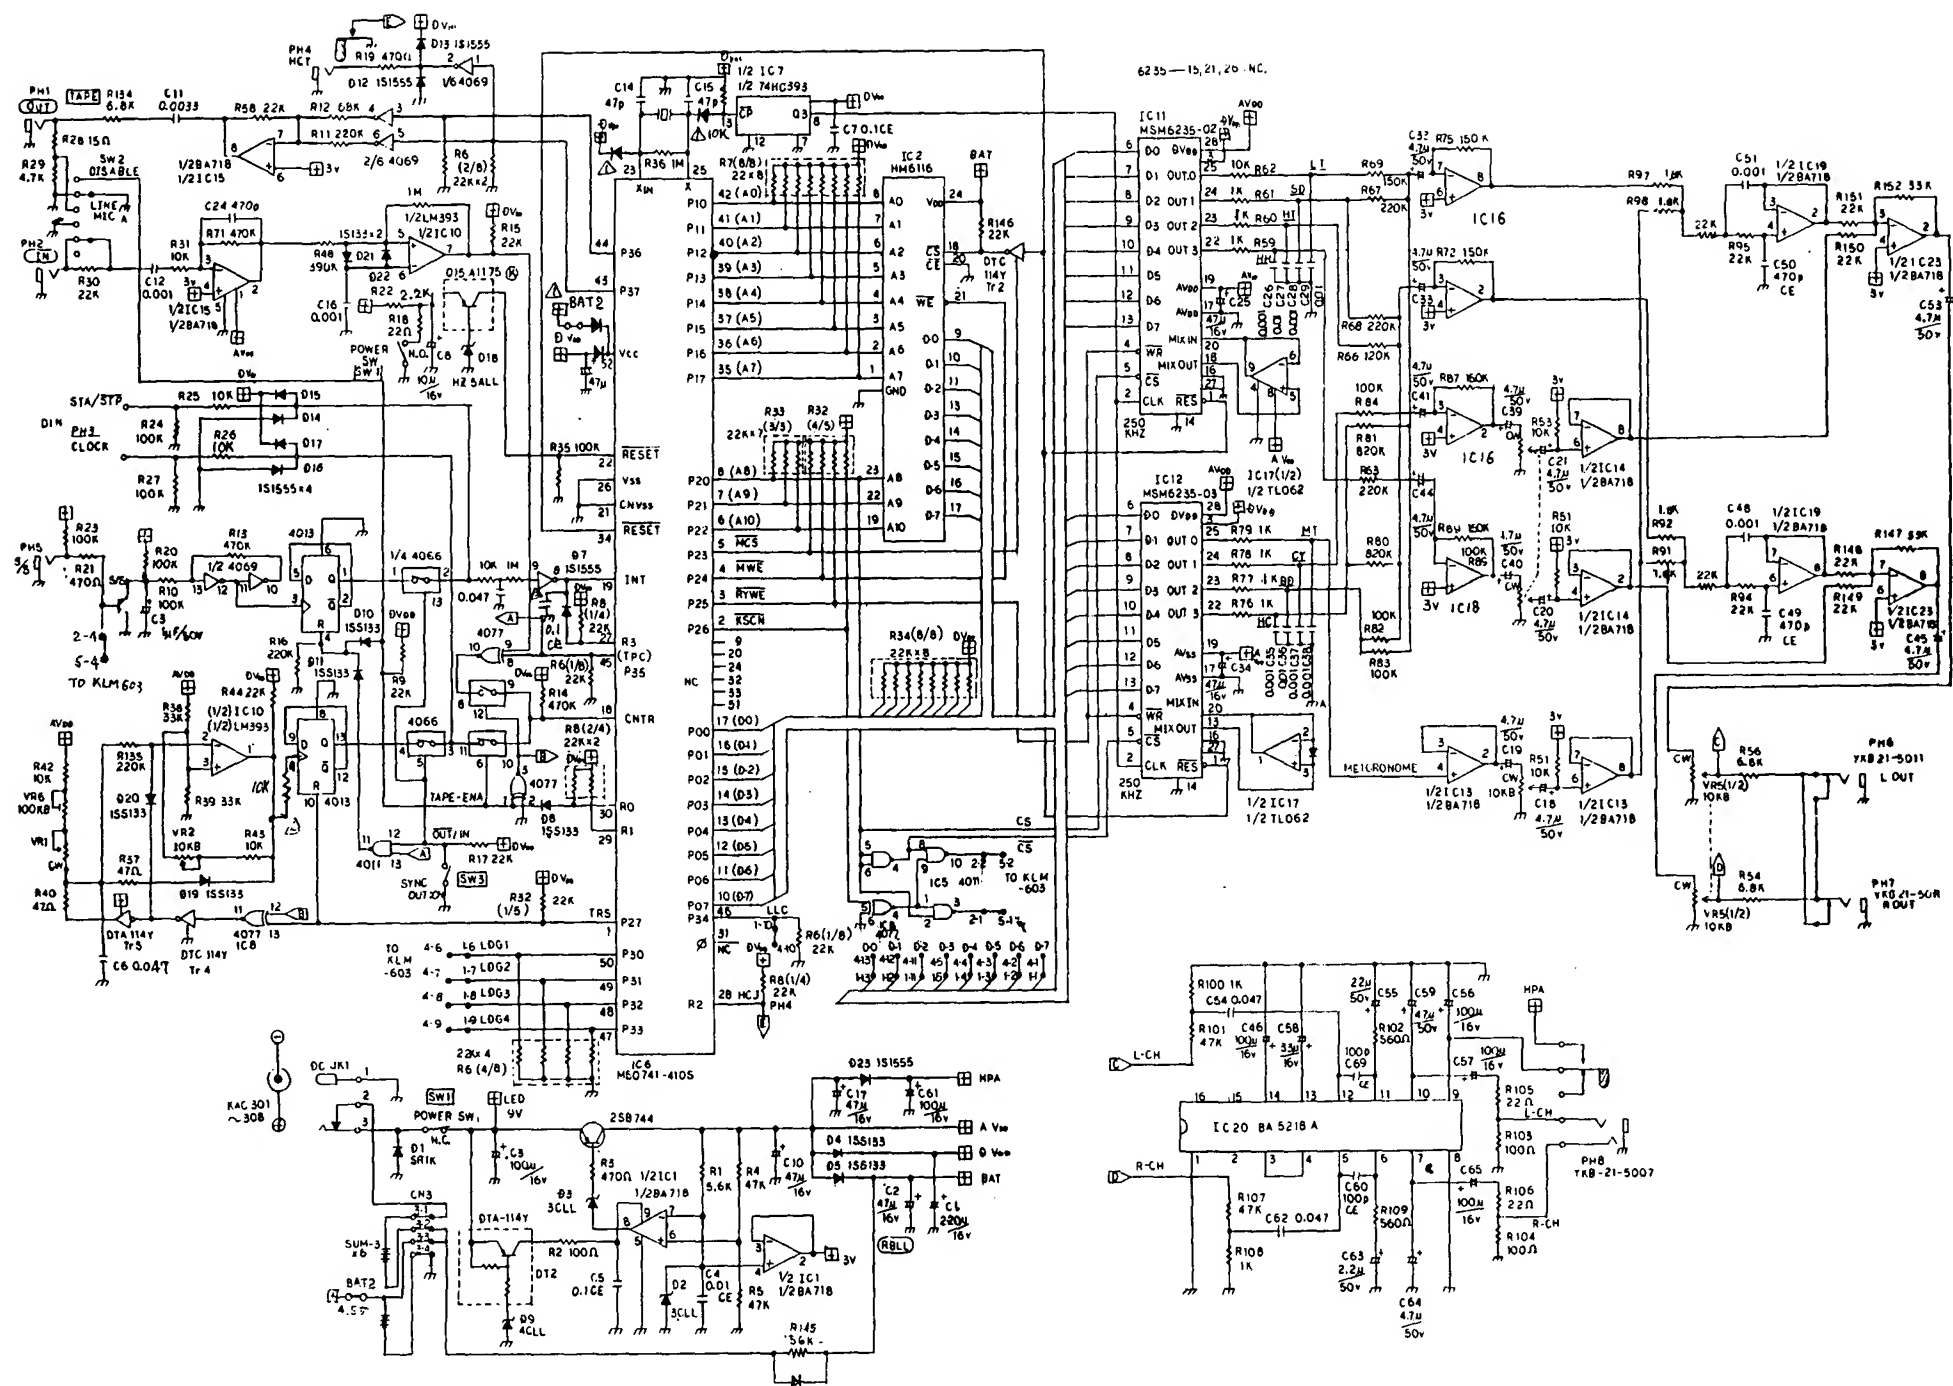

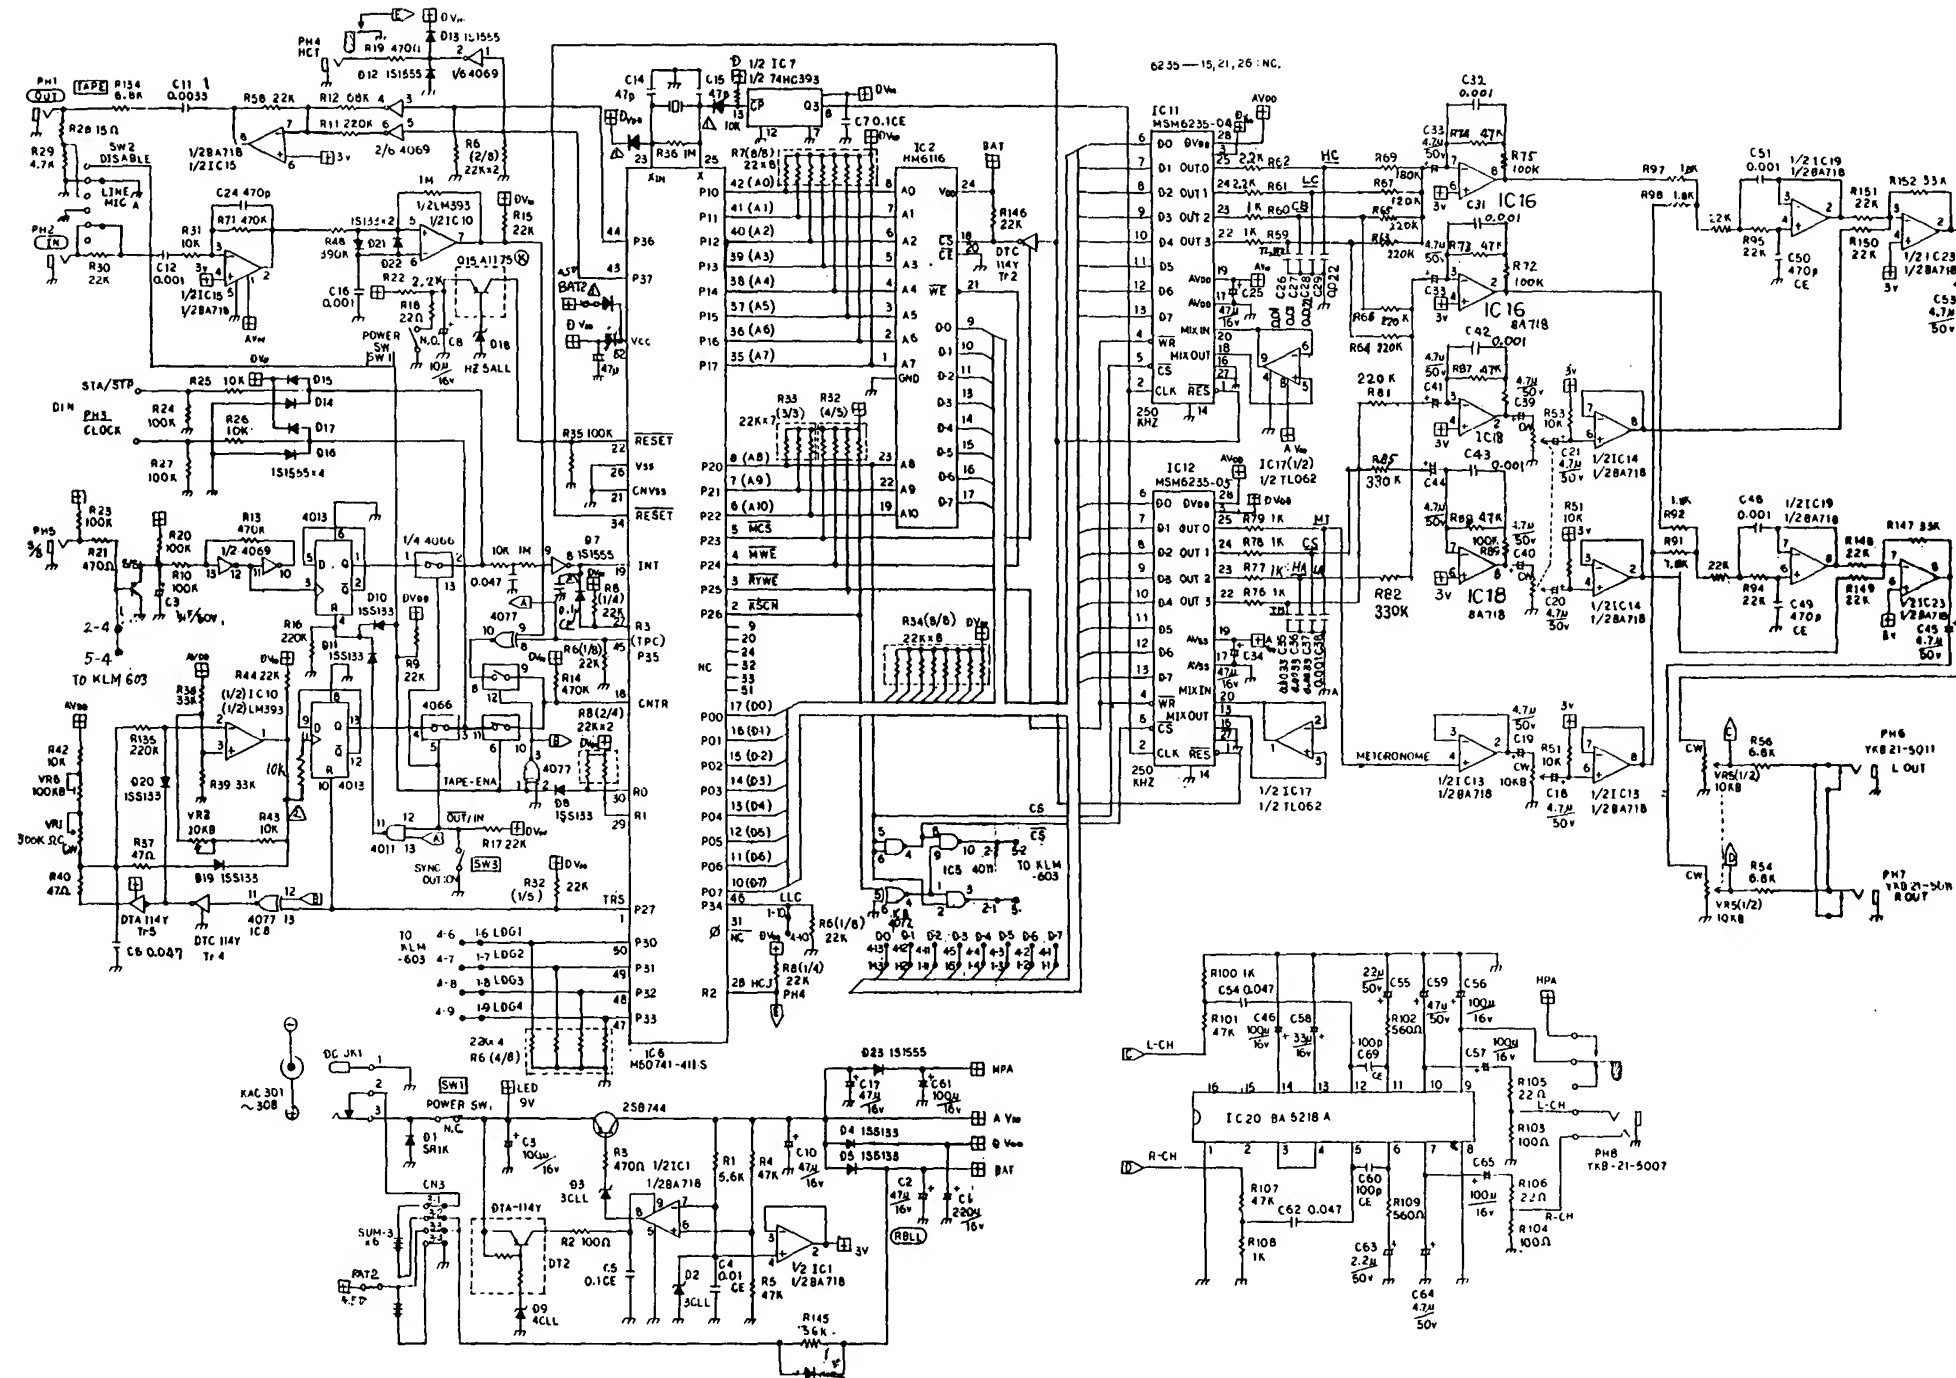


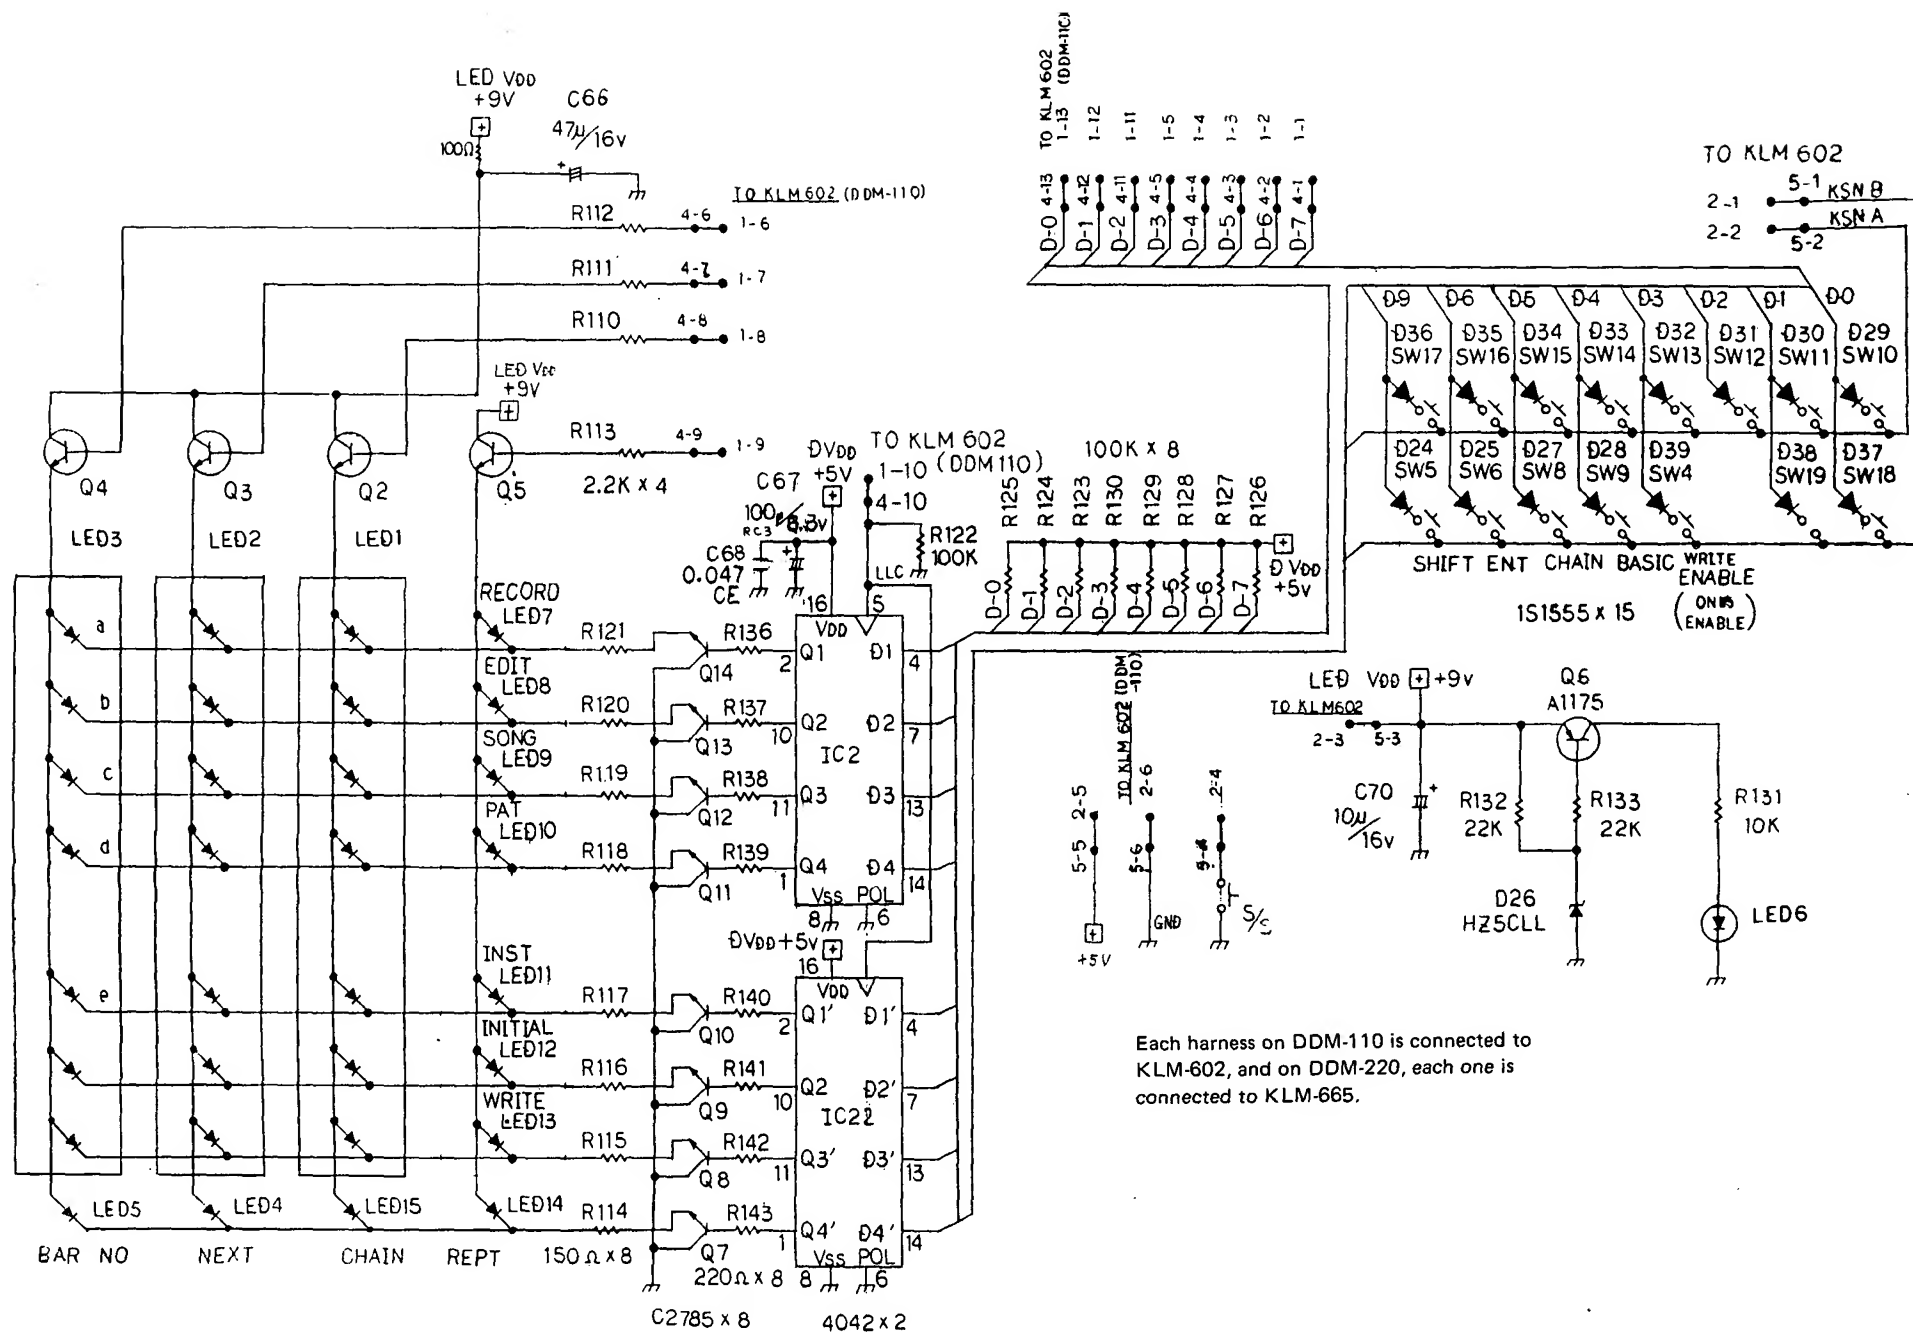


DDM-110/220, KLM-603


5. PC BOARD

DDM-110, KLM-602

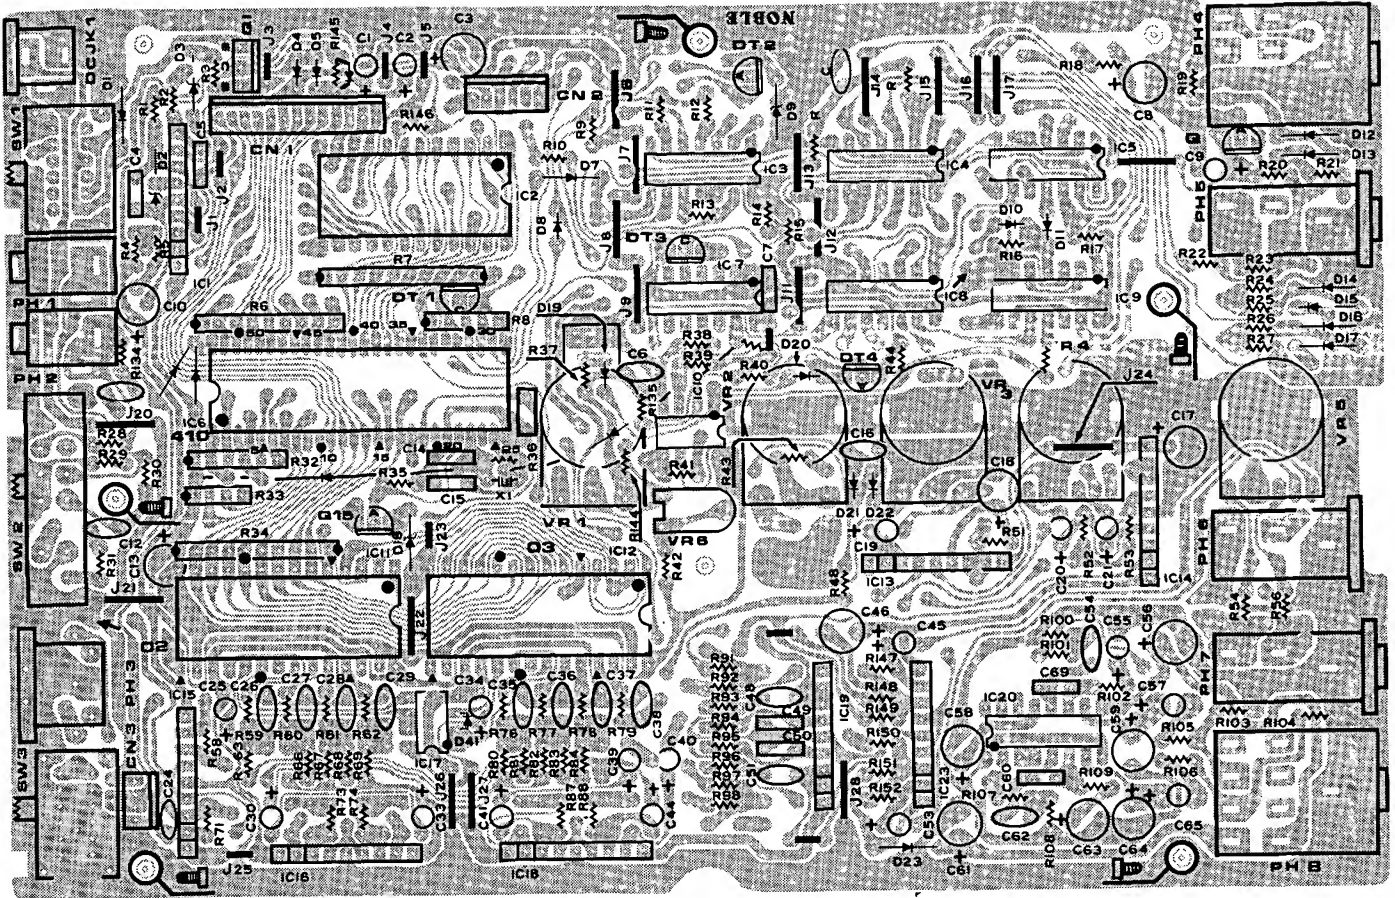

DDM-220, KLM-665

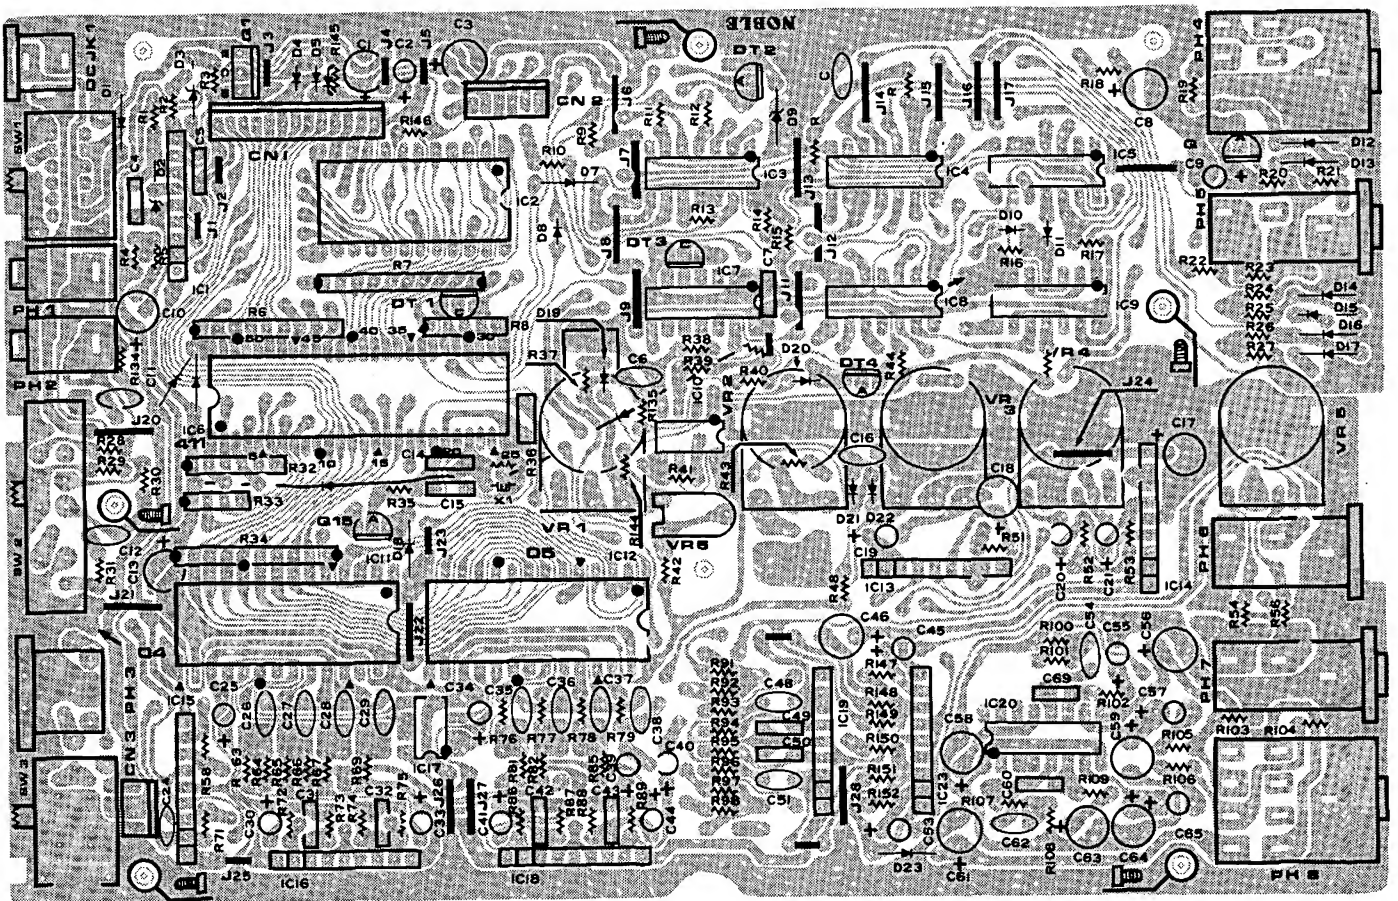

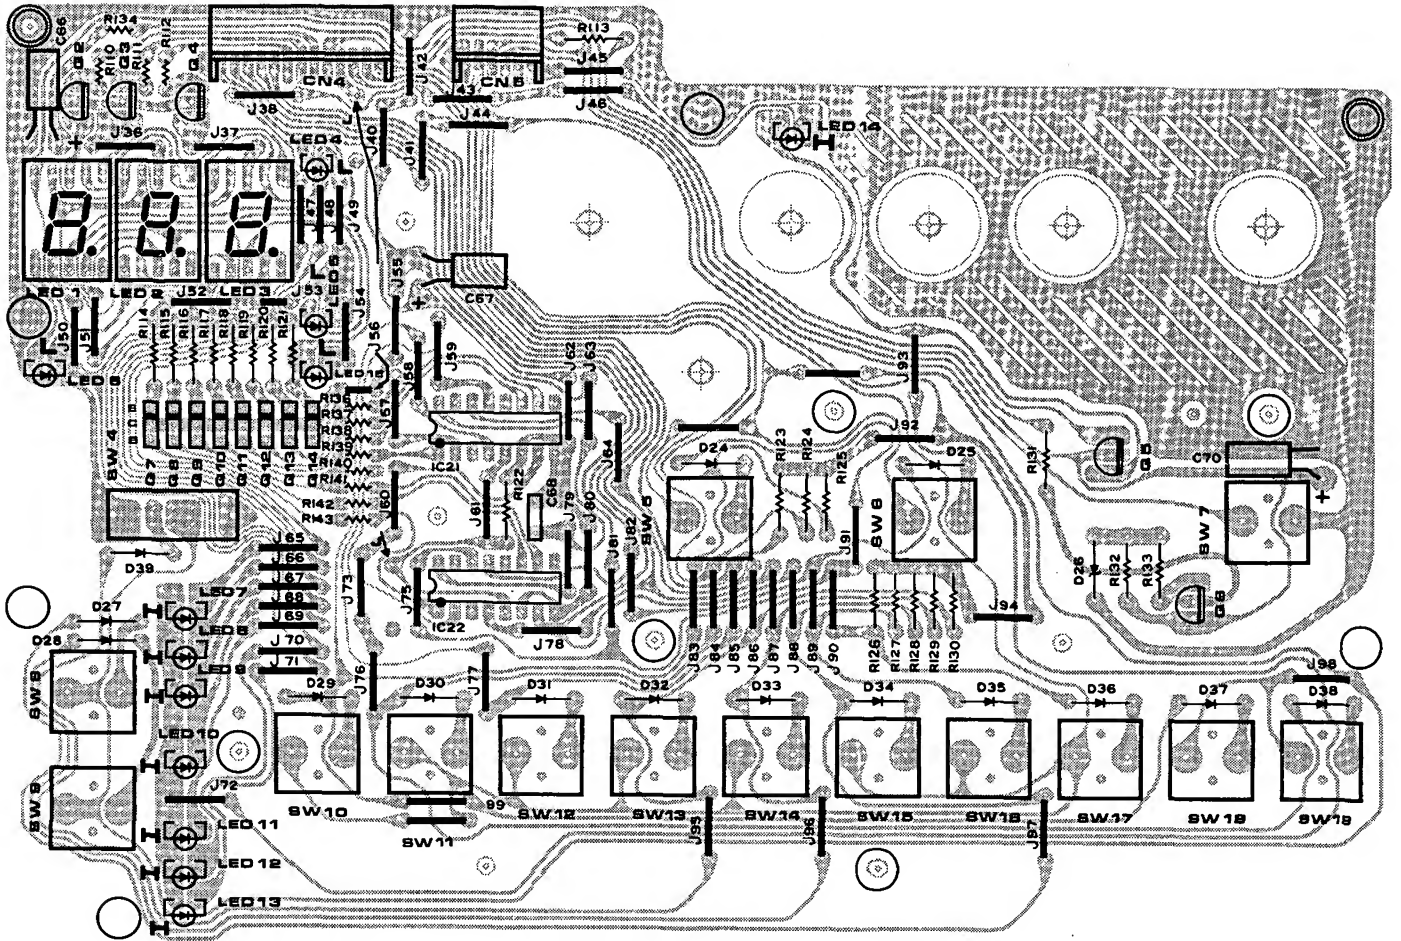

6. ADJUSTMENT PROCEDURE

Tempo Adjustment

1. Turn both the tempo COARSE and FINE knobs all the way clockwise (to the MAXIMUM settings).
2. Connect oscilloscope to IC9 (4013) 13-pin and confirm waveform in figure 1.
3. Adjust VR6 if necessary.

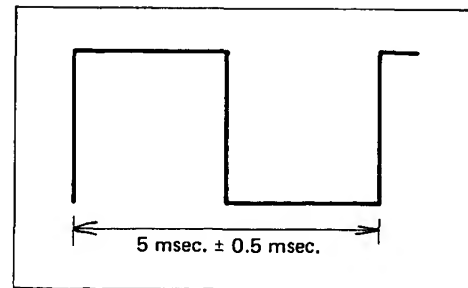


Fig. 1

7. CIRCUIT DESCRIPTIONS

1. DDM-110/220 system structure.


The DDM-110/220 consists of the following sections: CPU, memory, switch input, display, tape interface, tempo oscillator, headphone amp, mixer, LPF, and power supply.

- 1) The CPU uses an 8-bit microprocessor, the M50741, to control the entire system. The DDM-110 and DDM-220


use different versions of the CPU because of the difference in the programs in ROM. Care must be taken, therefore, when replacing these parts.

Note: The DDM-110 uses the M50741-410S
The DDM-220 uses the M50741-411S

PIN CONFIGURATION

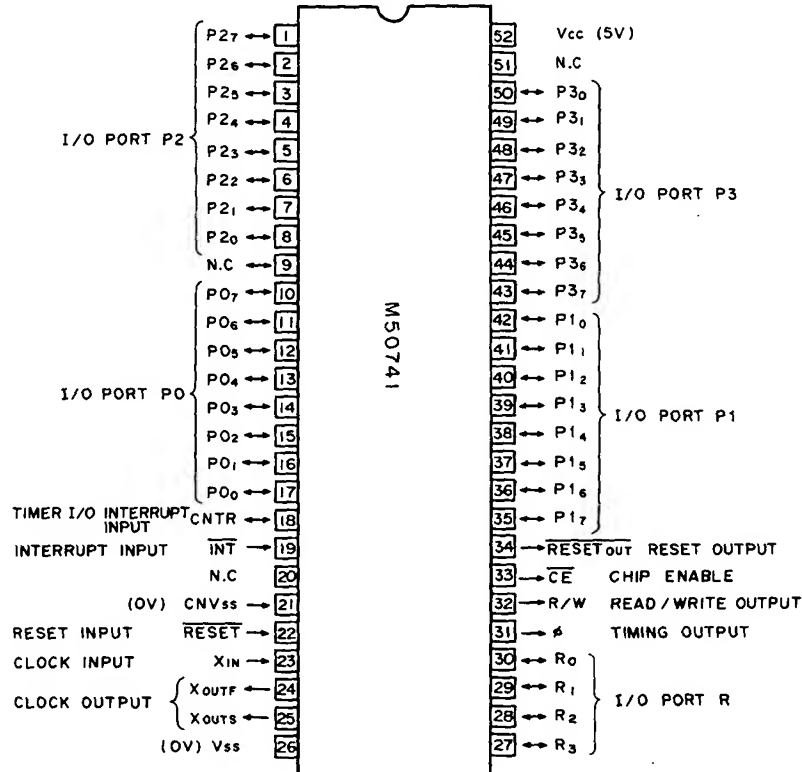

BLOCK DIAGRAM

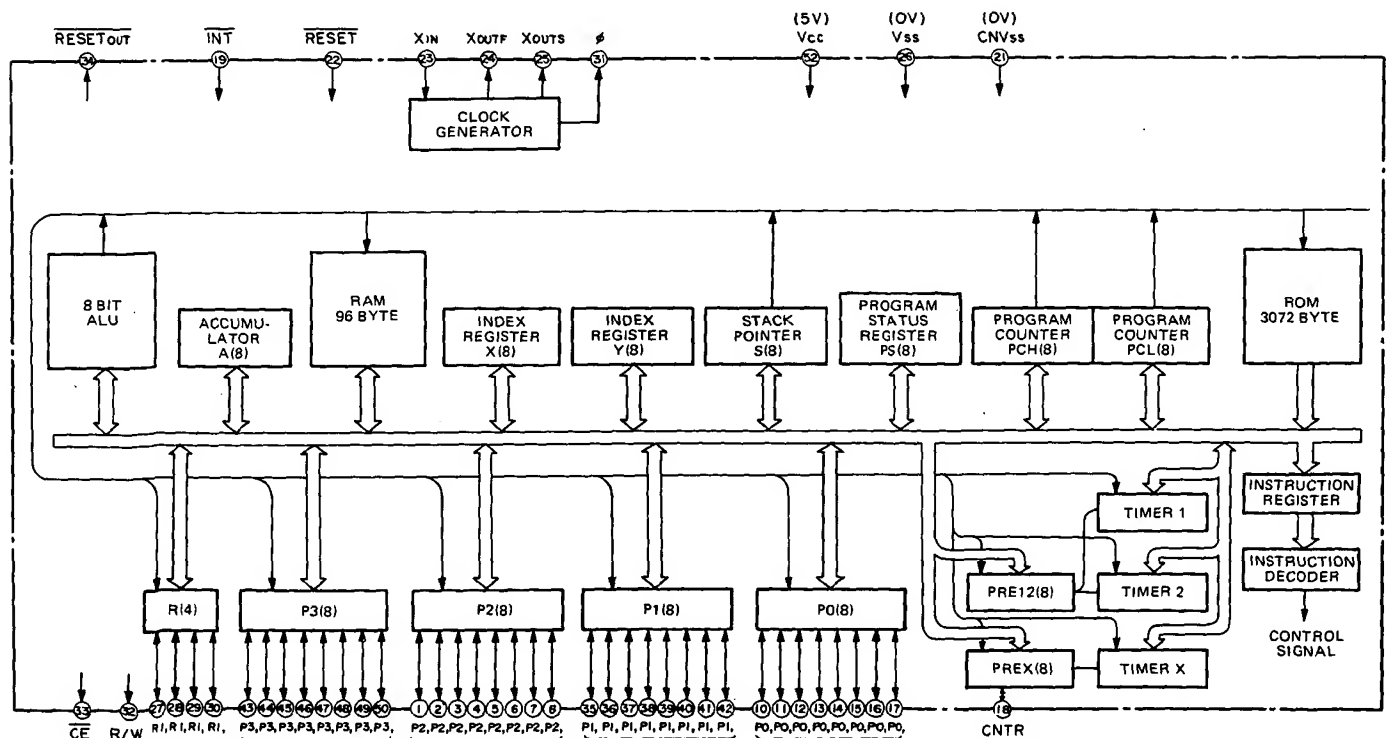

CPU Terminal Function

| Pin | Term | Name | Type | Function |
|-------|-----------|--------------------|----------------|--|
| 52 | VCC | Power supply input | Input | Diode OR circuit constructed with VDD and VBATT |
| 26 | VSS | Power supply input | Input | Applies 0V (GND) |
| 21 | CNVSS | CNVSS input | Input | Connects to VSS |
| 22 | RESET | RESET input | Input | Resets when level goes to low for 2 μ s or more; power on/off detection. |
| 23 | XIN | Clock input | Input | Operates with 4MHz ceramic oscillator connected between XIN and XOUT. |
| 25 | XOUT | Clock output | Output | Output for internal clock generator. This output is converted to 250kHz by IC7 (74HC393) and used for MSM6235 clock. |
| 18 | CNTR | Timer input | Input | Input for clock signal from external device or internal tempo oscillator circuit. Produces basic timing for DDM tempo; also used during tape interface input. |
| 19 | INT | Interrupt input | Input | For start/stop control. Start – low; Stop – high. |
| 10–17 | P00–P07 | I/O port P0 | Input & output | An 8-bit I/O port used as data bus. |
| 35–42 | P10–P17 | Output port P1 | Output | Address bus output port. A(0)–A(10). |
| 6–8 | P20–P22 | Output port P2 | Output | As above. |
| 2–5 | P23–P26 | I/O port P2 | Input & output | MCS, MWE, RYWE, KSCN |
| 1 | P27 | Output port P2 | Output | Outputs high pulse when start switch turns on. Controls tempo oscillator circuit. |
| 43–50 | P30–P37 | Output port P3 | Output | P30–P33 4 bits control LED display. P34 1 bit is for LED clock. P35 1 bit controls tape interface input phase. P36–P37 are for tape interface output and P37 is for handclaps trigger out. |
| 27–30 | R0–R3 | Input port R | Input | R0 1 bit is for tape interface position detection. R1 is high level. R2 detects whether anything is plugged into the TRIG OUT jack. Note: Observation of the R port waveform will show an output signal in time with the address signal. However, in this unit a diode is employed and these are only used as inputs. |
| 34 | RESET OUT | Reset output | Output | Reset signal output for MSM6235. |

2) Memory Section

This RAM (16k bit CMOS Random Access Memory HM 6116) is used, via the CPU, for reading and writing rhythm patterns and performance sequences, etc.

This data is backed up by a battery. Data will be lost if the battery has not been put in or if it runs low. In such cases, load data from the data tape, using the tape interface.

In addition, the power supply circuit C2 capacitor (47 μ F/ 16V RBLL) is used for short-term memory backup. If replacement is necessary, be sure to use the same type, having low leakage current.


The 6235RS is an LSI with PCM encoded recordings of instrument sounds and a D/A converter with 8-bit data bus interface, all on a single chip. Under CPU control, this can produce up to four sounds simultaneously. The DDM units each use two of these LSI chips so they can generate up to eight sounds at once.

Note 1: On the DDM-110, the hi-hat (HH) open and closed sounds cannot be sounded at the same time, they both use the same terminal; the same is true for the snare and rimshot sounds.


On the DDM-220, the timble and woodblock cannot be sounded together; the same is true for the hi-agogo and lo-agogo.

Note 2: The MSM6235 chip version number is different for the DDM-110 and DDM-220. Be careful not to confuse the two when replacing this part.

PIN CONFIGURATION

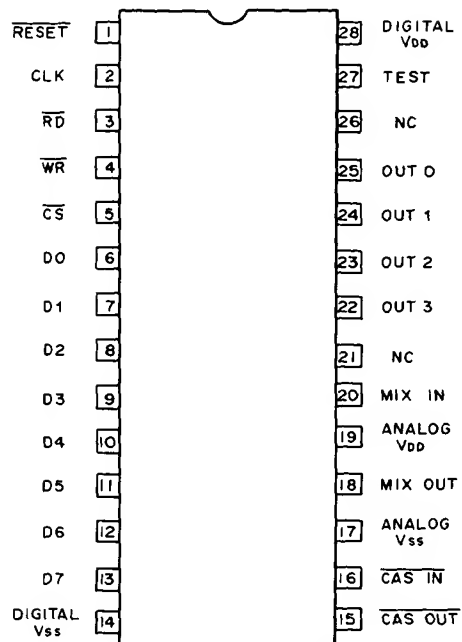

BLOCK DIAGRAM

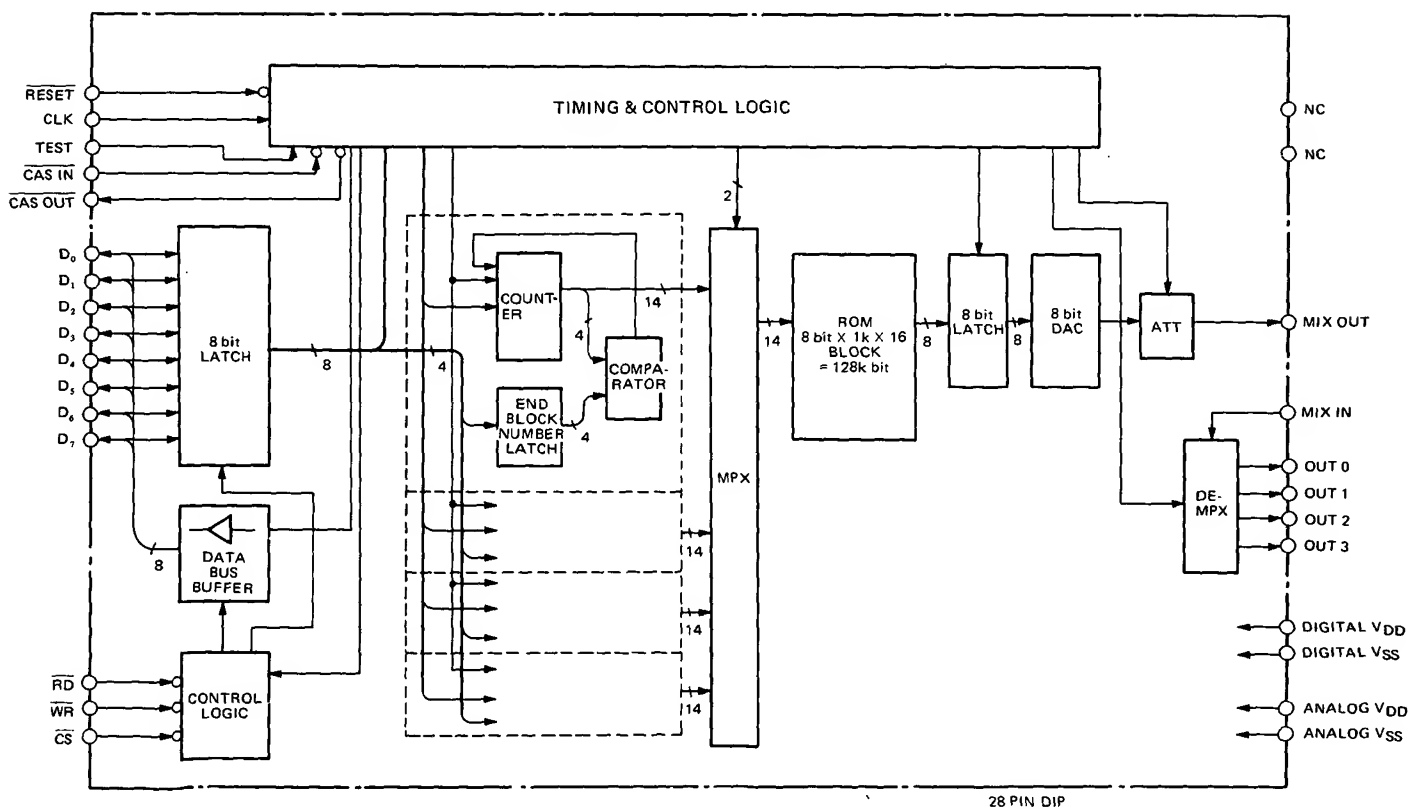

MSM6235 Terminal Functions

| Pin | Term | Function |
|--------|----------------------------------|---|
| 1 | RESET | Input terminal for internal initialization. Low level is active. |
| 2 | CLK | Input for timing signal. |
| 3 | RD | As long as this input is low, the D0–D7 terminals become outputs, for reading internal status information to the CPU. However, this is only enabled when the CS (chip select) terminal is at low level. |
| 4 | WR | As long as this input is low, this LSI inputs control words from the CPU via the data bus and latches the trailing edge. However, the CS terminal must be low level for this to be enabled. |
| 5 | CS | The chip select terminal for this LSI. Low level enables the WR and RD terminals. High level disables them. |
| 6–13 | D0–D7 | An 8-bit 2-way data bus terminal connected to the CPU system data bus. This is used as an output when CS and RD are low. Otherwise it is an input. |
| 18 | MIX OUT (mixed signal output) | Serial output of 4-channel analog signal. This signal is impedance converted and input to the MIX IN terminal. |
| 20 | MIX IN (mixed signal input) | This input takes the MIX OUT 4-channel serial analog output for separate output through the OUT 0–3 terminals. The MIX OUT signal is converted to low impedance before input to this terminal. |
| 22–25 | OUT 0–3 | Time shared output for each channel from MIX IN input. Uses analog switching. |
| 14, 28 | Digital VDD, VSS | Power supply input for digital sections of this LSI. |

3) Switch input section and display section.

The DDM-110 and DDM-220 both use the KLM-603 board. The CPU reads key input data, processes it, and lights the appropriate LEDs.

Note: This board is the same for the DDM-110 and DDM-220 but the harness destination is the KLM-602 for the DDM-110, and the KLM-665 for the DDM-220.

4) Tape interface section.

Used to save digital data from RAM to cassette tape and to load it back from tape to RAM. For output to tape, the data is sent using CPU ports P36 and P37. For input to RAM, the CPU CNTR terminal is used.

5) Tempo oscillator circuit.


This oscillator uses the LM393 (IC10) comparator IC. The tempo control FINE knob varies hysteresis and the COARSE knob adjusts the time constant.

6) Headphone amp.

To avoid unnecessary battery drain, this is designed to operate only when headphones are plugged into the jack. So when performing service procedures remember to plug headphones into this jack, otherwise the circuit will not operate.

BA5218A

BLOCK DIAGRAM

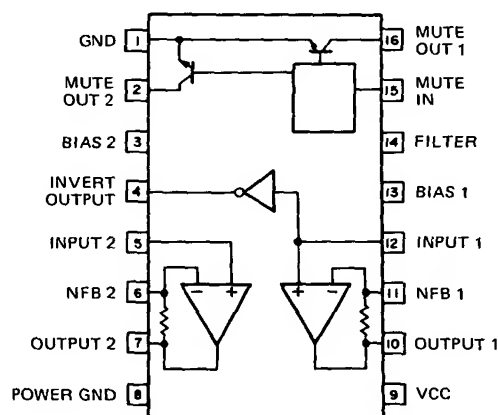

7) Power supply section.

To prevent battery leakage, this circuit is designed to cut off when voltage drops below about 4.6V. C2 is a capacitor used to maintain voltage for memory backup.


8) Mixer and LPF sections.

Please note that the mixer time constants are different for the DDM-110 and DDM-220.

8. TROUBLESHOOTING CHART

Troubleshooting Chart

The order in which things should be checked naturally coincides with the signal path in the DDM-110/220. Please refer to this chart to help pinpoint sources of trouble. Remember to save user data to tape before beginning service procedures.

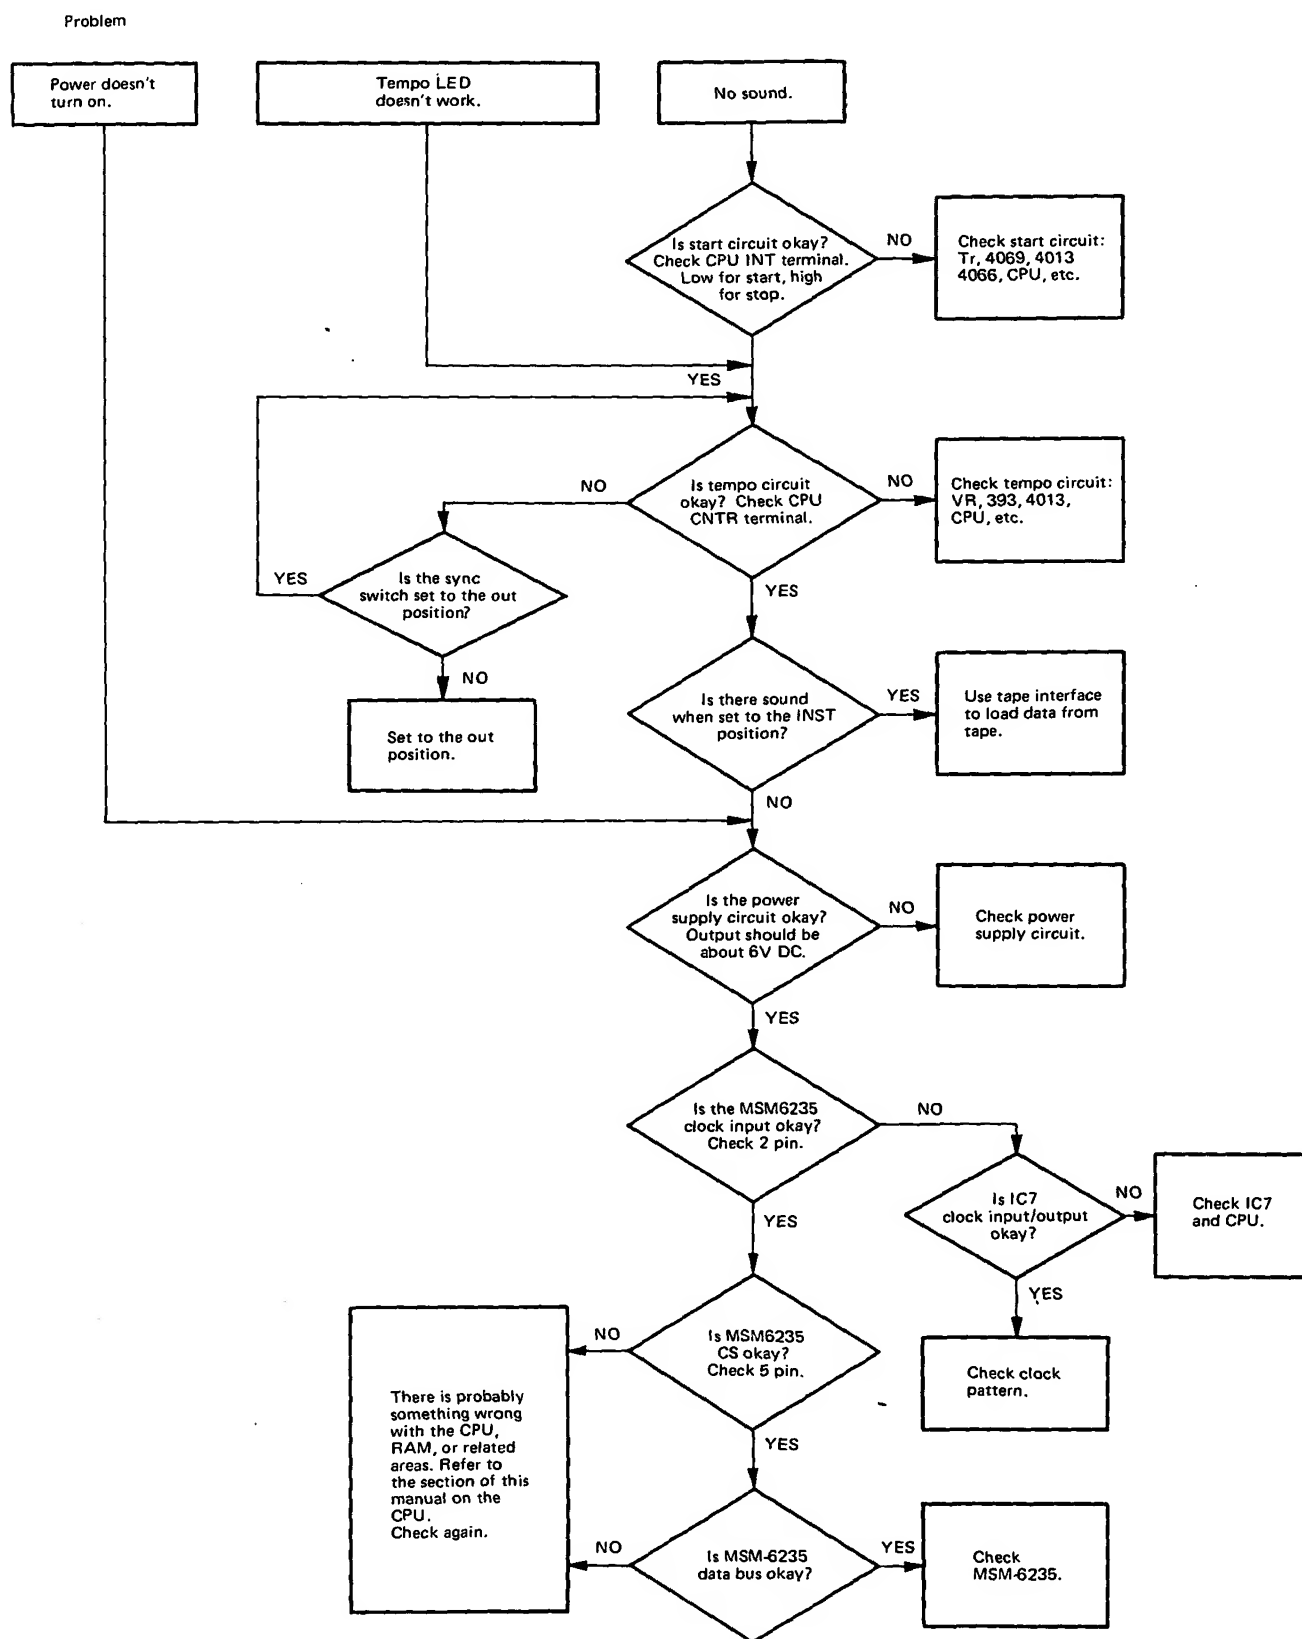

9. PARTS LIST

| PART CODE | PART NAME SPECIFICATIONS | P.C. BOARD | | Q'TY 110 | Q'TY 220 | IDENTIFICATION NO. FUNCTION |
|------------------|-----------------------------|---------------|-----|-------------|-------------|--------------------------------|
| | | 110 | 220 | | | |
| CARBON RESISTORS | | | | | | |
| 10016510 | 1/6JY 10K | 602 | 665 | 1 | 1 | |
| 10413315 | S1/4JYTP 150Ω | 603 | 603 | 8 | 8 | |
| 10413422 | S1/4JYTP 2.2K | 603 | 603 | 1 | 1 | |
| 10413510 | S1/4JYTP 10K | 603 | 603 | 1 | 1 | |
| 10413522 | S1/4JYTP 22K | 603 | 603 | 2 | 2 | |
| 10413610 | S1/4JYTP 100K | 603 | 603 | 9 | 8 | |
| 10416000 | 1/6JTP 0Ω | 602 | 665 | 10 | 10 | |
| | | 603 | 603 | 2 | 2 | |
| 10416215 | 1/6JTP 15Ω | 602 | 665 | 1 | 1 | |
| 10416222 | 1/6JTP 22Ω | 602 | 665 | 3 | 3 | |
| 10416247 | 1/6JTP 47Ω | 602 | 665 | 2 | 2 | |
| 10416310 | 1/6JTP 100Ω | 602 | 665 | 3 | 3 | |
| | | 603 | 603 | 1 | 1 | |
| 10416322 | 1/6JTP 220Ω | 602 | 665 | 1 | 1 | |
| | | 603 | 603 | 8 | 8 | |
| 10416347 | 1/6JTP 470Ω | 602 | 665 | 3 | 3 | |
| 10416356 | 1/6JTP 560Ω | 602 | 665 | 2 | 2 | |
| 10416410 | 1/6JTP 1.0K | 602 | 665 | 10 | 8 | |
| 10416418 | 1/6JTP 1.8K | 602 | 665 | 4 | 4 | |
| 10416422 | 1/6JTP 2.2K | 603 | 603 | 3 | 3 | |
| | | | 665 | | 3 | |
| 10416447 | 1/6JTP 4.7K | 602 | 665 | 1 | 1 | |
| 10416456 | 1/6JTP 5.6K | 602 | 665 | 1 | 1 | |
| 10416468 | 1/6JTP 6.8K | 602 | 665 | 3 | 3 | |
| 10416510 | 1/6JTP 10K | 602 | 665 | 9 | 9 | |
| 10416522 | 1/6JTP 22K | 602 | 665 | 15 | 15 | |
| 10416533 | 1/6JTP 33K | 602 | 665 | 4 | 4 | |
| 10416547 | 1/6JTP 47K | 602 | 665 | 4 | 8 | |
| 10416556 | 1/6JTP 56K | 602 | 665 | 1 | 1 | |
| 10416568 | 1/6JTP 68K | 602 | 665 | 1 | 1 | |
| 10416610 | 1/6JTP 100K | 602 | 665 | 9 | 10 | |
| | | 603 | 603 | 1 | 1 | |
| 10416612 | 1/6JTP 120K | 602 | 665 | 1 | 1 | |
| 10416615 | 1/6JTP 150K | 602 | 665 | 5 | 0 | |
| 10416618 | 1/6JTP 180K | 602 | 665 | 0 | 1 | |
| 10416622 | 1/6JTP 220K | 602 | 665 | 6 | 8 | |
| 10416633 | 1/6JTP 330K | 602 | 665 | 0 | 2 | |

| PART CODE | PART NAME SPECIFICATIONS | P.C. BOARD | | Q'TY 110 | Q'TY 220 | IDENTIFICATION NO. FUNCTION |
|-------------------------|--------------------------|------------|-----|----------|----------|-----------------------------|
| | | 110 | 220 | | | |
| 10416639 | 1/6JTP 390K | 602 | 665 | 1 | 1 | |
| 10416647 | 1/6JTP 470K | 602 | 665 | 3 | 3 | |
| 10416682 | 1/6JTP 820K | 602 | 665 | 2 | 0 | |
| 10416710 | 1/6JTP 1.0M | 602 | 665 | 3 | 3 | |
| BLOCK RESISTOR | | | | | | |
| 13503522 | RKC1/8B3J 22K | 602 | 665 | 1 | 1 | |
| 13504522 | RKC1/8B4J 22K | 602 | 665 | 1 | 1 | |
| 13505522 | RKC1/8B5J 22K | 602 | 665 | 1 | 1 | |
| 13508522 | RKC1/8B8J 22K | 602 | 665 | 1 | 1 | |
| 13608522 | RKC1/8B8DJ 22K | 602 | 665 | 2 | 2 | |
| MYLAR CAPACITORS | | | | | | |
| 20402410 | 50V 0.001μF K | 602 | 665 | 9 | 9 | |
| 20402433 | 50V 0.0033μF K | 602 | 665 | 1 | 4 | |
| 20402510 | 50V 0.01μF K | 602 | 665 | 3 | 2 | |
| 20402522 | 50V 0.022μF K | 602 | 665 | 0 | 2 | |
| 20402547 | 50V 0.047μF K | 602 | 665 | 4 | 4 | |
| CERAMIC CAPACITORS | | | | | | |
| 21452470 | 50V 47PF TP | 602 | 665 | 2 | 2 | |
| 21453100 | 50V 100PF TP | 602 | 665 | 2 | 2 | |
| 21453470 | 50V 470PF TP | 602 | 665 | 3 | 3 | |
| 21455100 | 50V 0.01μF TP | 602 | 665 | 1 | 1 | |
| 21455470 | 50V 0.047μF TP | 603 | 603 | 1 | 1 | |
| 21456100 | 25V 0.1μF TP | 602 | 665 | 3 | 3 | |
| | | 603 | 603 | 2 | 2 | |
| ELECTROLYTIC CAPACITORS | | | | | | |
| 25402322 | 10V 220μF RE.T2 | 602 | 665 | 1 | 1 | |
| 25403210 | 16V 10μF RE.T2 | 602 | 665 | 1 | 1 | |
| | | 603 | 603 | 1 | 1 | |
| 25403233 | 16V 33μF RE.T2 | 602 | 665 | 1 | 1 | |
| 25403247 | 16V 47μF RE.T2 | 602 | 665 | 5 | 5 | |
| | | 603 | 603 | 1 | 1 | |
| 25404147 | 25V 4.7μF RE.T2 | 602 | 665 | 6 | 6 | |
| 25406110 | 50V 1μF RE.T2 | 602 | 665 | 1 | 1 | |
| 25406122 | 50V 2.2μF RE.T2 | 602 | 665 | 2 | 2 | |
| 25411310 | 6.3V 100μF RC-T2 | 602 | 665 | 5 | 5 | |

| PART CODE | PART NAME SPECIFICATIONS | P.C. BOARD | | Q'TY 110 | Q'TY 220 | IDENTIFICATION NO. FUNCTION |
|---------------------|-----------------------------|---------------|-----|-------------|-------------|--------------------------------|
| | | 110 | 220 | | | |
| 25413310 | 16V 100 μ F RC-T2 | 602 | 665 | 1 | 1 | |
| 25423247 | 16V 47 μ F RB-LL-T2 | 602 | 665 | 1 | 1 | |
| 25451310 | 6.3V 100 μ F RC-3-T2 | 603 | 603 | 1 | 1 | |
| 25454147 | 25V 4.7 μ F RC3-T2 | 602 | 665 | 8 | 8 | |
| TRANSISTORS | | | | | | |
| 30100328 | TR 2SB744 A P/Q | 602 | 665 | 1 | 1 | |
| 30400020 | TR 2SA1175 K TN | 602 | 665 | 2 | 2 | |
| | | 603 | 603 | 1 | 1 | |
| 30420020 | TR 2SC2785 K TN | 603 | 603 | 12 | 12 | |
| DIGITAL TRANSISTORS | | | | | | |
| 30430030 | TR DTA-114Y T-93 | 602 | 665 | 2 | 2 | |
| 30430040 | TR DTC-114Y T-93 | 602 | 665 | 2 | 2 | |
| DIODES | | | | | | |
| 31000800 | 1S2473 | 602 | 665 | 4 | 4 | |
| 31001500 | SR1K-2 | 602 | 665 | 1 | 1 | |
| 31400300 | 1S-2473 T-77 | 602 | 665 | 12 | 8 | |
| | | 603 | 603 | 15 | 15 | |
| 31401300 | 1SS-133 T-77 | 602 | 665 | 10 | 9 | |
| LED | | | | | | |
| 31203600 | SLP-178C | 603 | 603 | 7 | 7 | |
| 31203700 | SLP-278C | 603 | 603 | 5 | 5 | |
| 31203800 | LA401-VF K/L | 603 | 603 | 3 | 3 | |
| ZENER DIODES | | | | | | |
| 31422500 | HZ-5CLL-TD | 603 | 603 | 1 | 1 | |
| 31423100 | HZ-4CLL-TD | 602 | 665 | 1 | 1 | |
| 31423300 | HZ-5ALL-TD | 602 | 665 | 1 | 1 | |
| 31423400 | HZ-3CLL-TD | 602 | 665 | 2 | 2 | |

| PART CODE | PART NAME SPECIFICATIONS | P.C. BOARD | | Q'TY 110 | Q'TY 220 | IDENTIFICATION NO. FUNCTION |
|---------------------|-----------------------------|---------------|-----|-------------|-------------|--|
| | | 110 | 220 | | | |
| IC | | | | | | |
| 32003063 | TC-40H393 P | 602 | 665 | 1 | 1 | DUAL 4 BIT BINARY COUNTER |
| 32004004 | HD-14066 BP | 602 | 665 | 1 | 1 | QUAD ANALOG Switch |
| 32004008 | HD-14011 BP | 602 | 665 | 1 | 1 | QUAD 2-INPUT NAND GATE |
| 32004009 | HD-14013 BP | 602 | 665 | 1 | 1 | DUAL TYPE D FILP FLOP |
| 32004013 | HD-14042 BP | 603 | 603 | 2 | 2 | QUAD LATCH |
| 32004019 | HD-14069 UBP | 602 | 665 | 1 | 1 | HEX INVERTER |
| 32004028 | HM-6116LP-4 | 602 | 665 | 1 | 1 | 2048 WORD x 8 BIT STATIC RAM |
| 32004070 | HD-14077BP | 602 | 665 | 1 | 1 | QUAD EXCLUSIVE NOR GATE |
| 32006013 | MSM-6235RS-02 | 602 | 665 | 1 | 0 | OP AMP |
| 32006014 | MSM-6235RS-03 | 602 | 665 | 1 | 0 | |
| 32006015 | MSM-6235RS-04 | 602 | 665 | 0 | 1 | |
| 32006016 | MSM-6235RS-05 | 602 | 665 | 0 | 1 | |
| 32007004 | BA-718 | 602 | 665 | 8 | 8 | |
| 32007009 | BA6993 | 602 | 665 | 1 | 1 | HEAD PHONE AMP CPU |
| 32007011 | BA5218A | 602 | 665 | 1 | 1 | |
| 32011037 | M50741-410SP | 602 | 665 | 1 | 0 | |
| 32011038 | M50741-411SP | 602 | 665 | 0 | 1 | |
| 32021022 | TL-062 | 602 | 665 | 1 | 1 | |
| CERAMIC OSCILLATOR | | | | | | |
| 33501400 | KBR-4.0MHZ | 602 | 665 | 1 | 1 | |
| SEMI-FIXED RESISTOR | | | | | | |
| 35121410 | VR B100K | 602 | 665 | 1 | 1 | |
| ROTARY VR | | | | | | |
| 36017000 | K162H0012-10KB x 2 | 602 | 665 | 2 | 2 | MASTER, HH/CYMBAL TEMPO FINE, METRONOME TEMP COARSE |
| 36017100 | K161B002Y-10KB | 602 | 665 | 2 | 2 | |
| 36018100 | K16110COJE-500KC | 602 | 665 | 1 | 1 | |

| PART CODE | PART NAME SPECIFICATIONS | P.C. BOARD | | Q'TY | Q'TY | IDENTIFICATION NO. FUNCTION |
|-----------------|-----------------------------|---------------|-----|------|------|--------------------------------|
| | | 110 | 220 | 110 | 220 | |
| SLIDE SW | | | | | | |
| 37303900 | SW R-S47836 | 602 | 665 | 2 | 2 | POWER SW, SYNC SW |
| 37304800 | SW SSB-323055 | 602 | 665 | 1 | 1 | TAPE INTERFACE SW |
| 37305000 | SW SSY-022 | 603 | 603 | 1 | 1 | RECORD SW |
| PUSH SW | | | | | | |
| 37506900 | SW KMR-VO1AV | 603 | 603 | 15 | 15 | |
| AC ADAPTERS | | | | | | |
| 40502700 | KAC-302 | | | | | UNI |
| 40502800 | KAC-303 | | | | | 117 2P |
| 40503000 | KAC-305 | | | | | JAM |
| 40503100 | KAC-306 | | | | | 240 AU |
| 40503200 | KAC-307 | | | | | 240 RM |
| 40503300 | KAC-308 | | | | | 240 AF |
| | | | | | | 220 GE |
| | | | | | | 220 SE |
| | | | | | | DEMKO |
| | | | | | | SEMKO |
| | | | | | | NEMKO |
| | | | | | | GAF |
| | | | | | | FIMKO |
| DC INPUT JACK | | | | | | |
| 45400300 | HEC-0470-01-230 | 602 | 665 | 1 | 1 | |
| MINI-PHONE JACK | | | | | | |
| 45400900 | HSJ-0786-01-010 3.5φ | 602 | 665 | 2 | 2 | |
| DIN JACK | | | | | | |
| 45402500 | TCS4650-01-1111 | 602 | 665 | 1 | 1 | |
| PHONE JACK | | | | | | |
| 45404100 | YKB21-5008 | 602 | 665 | 1 | 1 | |
| 45404200 | YKB21-5004 | 602 | 665 | 1 | 1 | |
| 45404300 | YKB21-5012 | 602 | 665 | 3 | 3 | |

| PART CODE | PART NAME SPECIFICATIONS | P.C. BOARD | | Q'TY | Q'TY | IDENTIFICATION NO. FUNCTION |
|-----------------|-----------------------------|---------------|-----|------|------|--------------------------------|
| | | 110 | 220 | 110 | 220 | |
| HARNESS | | | | | | |
| 47043000 | HNS-330 | 602 | 665 | 1 | 1 | |
| 47043100 | HNS-331 | 602 | 665 | 1 | 1 | |
| 47043200 | HNS-332 | 602 | 665 | 1 | 1 | |
| MP CONNECTOR | | | | | | |
| 47408804 | S4P W-P2604 #51 | 602 | 665 | 1 | 1 | |
| 47408806 | S6P W-P2606 #51 | 602 | 665 | 1 | 1 | |
| 47408813 | S13P W-P2613 #51 | 602 | 665 | 1 | 1 | |
| 47408906 | L6P W-P2806 #51 | 603 | 603 | 1 | 1 | |
| 47408913 | L13P W-P2813 #51 | 603 | 603 | 1 | 1 | |
| BATTERY CUSHION | | | | | | |
| 50005300 | KOC-F40218 | | | 1 | 1 | |
| RUBBER FEET | | | | | | |
| 50009100 | KOC-F40296 | | | 2 | 2 | |
| BATTERY | | | | | | |
| 52000300 | SUM-3DG 1.5V | | | 6 | 6 | |
| GND TERMINAL | | | | | | |
| 54010400 | TER51-0032-2ALH-S | | | 1 | 1 | |
| RECORD SW MASK | | | | | | |
| 55006500 | X-364.5 KOC-F40295 | | | 1 | 1 | |
| LED SPACER | | | | | | |
| 57503700 | NO.1 7.2MM E40171 | 603 | 603 | 8 | 8 | |
| 57503800 | NO.2 4.8MM E40171 | 603 | 603 | 4 | 4 | |
| CAUTION SEAL | | | | | | |
| 58020101 | KOC-F40301 | | | 1 | 1 | |

| PART CODE | SPECIFICATIONS | P.C. BOARD | | Q'TY 110 | Q'TY 220 | IDENTIFICATION NO. FUNCTION |
|-------------------|------------------|---------------|-----|-------------|-------------|--------------------------------|
| | | 110 | 220 | | | |
| MODEL NUMBER SEAL | | | | | | |
| 58020300 | DDM-110 | | | 1 | 0 | |
| 58020400 | DDM-220 | | | 0 | 1 | |
| SHIELDING SHEET | | | | | | |
| 58020700 | A KOC-F30043 | | | 1 | 1 | |
| 58020701 | B KOC-F30044 | | | 1 | 1 | |
| CONNECTION CORD | | | | | | |
| 60201301 | A 2.5 | | | 1 | 1 | |
| VR KNOB | | | | | | |
| 62013300 | A KOC-E40166 | | | 1 | 0 | |
| 62013600 | A KOC-E40166 | | | 0 | 1 | |
| 62013301 | B KOC-E40167 | | | 1 | 0 | |
| 62013601 | B KOC-E40167 | | | 0 | 1 | |
| 62013400 | SMALL KOC-E40143 | | | 3 | 0 | |
| 62013401 | | | | 0 | 3 | |
| PUSH SW KNOB | | | | | | |
| 62013500 | KOC-E40169 | | | 15 | 0 | |
| 62013501 | | | | 0 | 15 | |
| DISPLAY COVER | | | | | | |
| 63000400 | E40170 | | | 1 | 1 | |
| UPPER CASE | | | | | | |
| 64618400 | KOC-E10015 | | | 1 | 0 | |
| 64618500 | | | | 0 | 1 | |
| LOWER CASE | | | | | | |
| 64618600 | KOC-E10016 | | | 1 | 1 | |
| BATTERY CASE | | | | | | |
| 64618700 | KOC-E30063 | | | 1 | 1 | |
| BATTERY COVER | | | | | | |
| 64618800 | KOC-E40168 | | | 1 | 1 | |

| PART CODE | SPECIFICATIONS | P.C. BOARD | | Q'TY 110 | Q'TY 220 | IDENTIFICATION NO. FUNCTION |
|------------------|--------------------|---------------|-----|-------------|-------------|--------------------------------|
| | | 110 | 220 | | | |
| BATTERY TERMINAL | | | | | | |
| 64905300 | (+) KOC-C40503 | | | 2 | 2 | |
| 64905400 | (-) KOC-C40504 | | | 2 | 2 | |
| SCREW | | | | | | |
| 74530308 | PLAX B ZMC 3 × 8 | | | 20 | 21 | |
| 74560310 | PLAX B BZMC 3 × 10 | | | 5 | 5 | |
| INNER CARTON BOX | | | | | | |
| 80020020 | DDM-110 | | | 1 | 0 | |
| 80020030 | DDM-220 | | | 0 | 1 | |
| 80220020 | PACKING R/L SET | | | 1 | 1 | |

KORG[®]

KEIO ELECTRONIC LABORATORY CORP.
15-12, Shimotakaido 1-chome, Suginami-ku, Tokyo 168

© KEIO ELECTRONIC LABORATORY CORP. 1984

5912DGH PRINTED IN JAPAN